

INDI-PAXS

1/8 DIN STRAIN GAGE INPUT PANEL METER



1. INTRODUCTION	4
2. GENERAL DESCRIPTION	4
2.1. Dimensions in inches (mm)	5
2.2. Safety Summary	5
3. SPECIFICATIONS	5
3.1. Display	5
3.2. Power	5
3.3. Annunciators	5
3.4. Keypad	5
3.5. A/d converter	5
3.6. Update rates	6
3.7. Display messages	6
3.8. Connection type	6
3.9. Common mode range (w.r.t. Input common)	6
3.10. Sensor inputs	6
3.11. Bridge excitation	6
3.12. Low frequency noise rejection	6
3.13. User inputs (logic level)	6
3.14. Totalizer	6
3.15. Custom linearization	6
3.16. Memory	6
3.17. Certifications and compliances	6
3.18. Electromagnetic compatibility	7
3.19. Environmental conditions	7
3.20. Connections	7
3.21. Construction	7
3.22. Weight	7
4. ORDERING INFORMATION	8
5. ADDING OPTION CARDS	8
5.1. Communication cards (CARD-CDC)	8
5.1.1. Serial communications card	9
5.1.2. DeviceNet™ card	9
5.1.3. Modbus card	9
5.1.4. Profibus-DP card	9
5.1.5. USB programming card	9
5.2. Set-point cards (CARD-CDS)	9
5.2.1. Dual relay card	9
5.2.2. Quad relay card	9
5.2.3. Quad sinking open collector card	9
5.2.4. Quad sourcing open connector card	9
5.2.5. All four set-point card	9
5.3. Linear DC output (CARD-CDL)	10
5.3.1. Analog output card	10
6. INSTALLING THE METER	10
6.1. Installation	10
6.2. Installation Environment	10

7. SETTING THE JUMPERS	11
7.1. Bridge Excitation	11
7.2. Input Range	11
7.3. User Input Logic Jumper	11
8. INSTALLING AN OPTION CARD	12
9. WIRING THE METER.....	12
9.1. Wiring overview	12
9.2. EMC installation guidelines	12
9.3. Power wiring	13
9.4. Input signal wiring.....	14
9.4.1. Deadload compensation	14
9.4.2. Bridge compensation resistors	14
9.5. User input wiring.....	14
10. REVIEWING THE FRONT BUTTONS AND DISPLAY.....	15
11. PROGRAMMING THE METER.....	15
11.1. Module 1 – Signal input parameters (1-IMP).....	17
11.1.1. Input range	17
11.1.2. Display decimal point	17
11.1.3. Display rounding	17
11.1.4. Filter setting.....	17
11.1.5. Filter band	17
11.1.6. Scaling points.....	18
11.1.7. Scaling style	18
11.1.8. Input value for scaling point 1	18
11.1.9. Display value for scaling point 1.....	18
11.1.10. Input value for scaling point 2	18
11.1.11. Display value for scaling point 2.....	19
11.2. Module 2 – User input and front panel function key parameters (2-fnc)	19
11.2.1. No function	20
11.2.2. Programming Lock-Out.....	20
11.2.3. Zero (tare) display	20
11.2.4. Relative/absolute display	20
11.2.5. Hold display.....	20
11.2.6. Hold all functions.....	20
11.2.7. Synchronize meter reading	21
11.2.8. Store batch reading in totalizer	21
11.2.9. Select totalizer display	21
11.2.10. Reset totalizer	21
11.2.11. Reset and enable totalizer	21
11.2.12. Enable totalizer	21
11.2.13. Select maximum display	21
11.2.14. Reset maximum	21
11.2.15. Reset, select, enable maximum display	22
11.2.16. Select minimum display	22
11.2.17. Reset minimum	22
11.2.18. Reset, select, enable minimum display.....	22
11.2.19. Reset maximum and minimum.....	22
11.2.20. Change display intensity level.....	22
11.2.21. Set-point selection.....	23
11.2.22. Select set-point list.....	23
11.2.23. Print request.....	23
11.3. Module 3 - Display and program lock-out parameter (3-Loc).....	23
11.3.1. Maximum, minimum and totalizer display lock-out.....	24
11.3.2. SP-1 SP-2 SP-3 SP-4 set-point access	24
11.3.3. Program mode security code	24
11.3.4. Programming mode access	24
11.4. Module 4 – secondary function parameters (4-SEC)	25

11.4.1. Max capture delay time	25
11.4.2. Min capture delay time	25
11.4.3. Display update rate	25
11.4.4. Auto-zero tracking/Auto-zero band	25
11.4.5. Unites label backlight	26
11.4.6. Display offset value	26
11.5. Module 5 – Totalizer (integrator) parameters (5-tot)	26
11.5.1. Totalizer decimal point	26
11.5.2. Totalizer time base	26
11.5.3. Totalizer scale factor	27
11.5.4. Totalizer low cut value	27
11.5.5. Totalizer power up reset	27
11.5.6. Totalizer high order display	27
11.5.7. Totalizer batching	27
11.5.8. Totalizer using time table	28
11.5.9. Totalizer scale factor calculation examples	28
11.6. Module 6 – Set-point (Alarm) parameters (6-SPt)	29
11.6.1. Set-point selection	29
11.6.2. Set-point action	29
11.6.3. Set-point value	30
11.6.4. Hysteresis value	30
11.6.5. On time delay	31
11.6.6. Off time delay	31
11.6.7. Output logic	31
11.6.8. Reset action	31
11.6.9. Standby operation	32
11.6.10. Set-point annunciators	32
11.6.11. Alternate Set-points	32
11.7. Module 7 – Serial communications parameters (7-SrL)	32
11.7.1. Baud rate	32
11.7.2. Data bit	32
11.7.3. Parity bit	32
11.7.4. Meter address	33
11.7.5. Abbreviated printing	33
11.7.6. Print option	33
11.7.7. Sending Commands and Data	33
11.7.8. Receiving data	35
11.7.9. (CSR) Control Status Register	36
11.7.10. (AOR) Analog Output Register	37
11.7.11. Command response time	38
11.7.12. Communication format	38
11.8. Module 8 - Analog Output Parameters (8-Out)	39
11.8.1. Analog type	39
11.8.2. Analog assignment	39
11.8.3. Analog low scale value	40
11.8.4. Analog high scale value	40
11.8.5. Analog update time	40
11.9. Module 9 – Factory service operations (9-FCS)	40
11.9.1. Display intensity level	40
11.9.2. Restore factory defaults	40
11.9.3. Calibration	40
12. TROUBLESHOOTING	42
13. INDI-PAXS PROGRAMMING QUICK OVERVIEW	43
14. DRAWINGS	44

Rev.	Date	Reason
1.	25/04/2014	Optional cards added and minor corrections

1. INTRODUCTION

- Load cell, pressure and torque bridge inputs
- Dual range input: ± 24 mV or ± 240 mV
- Selectable 5 VDC or 10 VDC bridge excitation
- Optional custom units overlay w/ backlight
- Programmable auto-zero tracking
- 16 point scaling for non-linear correction
- 9 digit totalizer (integrator) with batching
- Programmable function keys/user inputs
- Four set-point alarm outputs (w/plug-in card)
- Communication and bus capabilities (w/plug-in card)
- Analog output signal (w/plug-in card)
- Pc software available for meter configuration
- Nema 4x/IP65 sealed front bezel



2. GENERAL DESCRIPTION

The INDI-PAXS (Strain Gage Input Meter) offers many features and performance capabilities to suit a wide range of industrial applications. The optional plug-in output cards allow the opportunity to configure the meter for present applications, while providing easy upgrades for future needs.

The meter employs a bright 0.56" (14.2 mm) LED display. The unit is available with a red sunlight readable LED. The intensity of display can be adjusted from dark room applications up to sunlight readable, making it ideal for viewing in bright light applications.

The Strain Gage meter has two bipolar mV input ranges: ± 24 mV DC or ± 240 mV DC. The internal bridge excitation is selectable for 5 VDC or 10 VDC. The excitation output is based on a reference, ensuring accurate and drift-free readouts. A 16 point scaling feature compensates for square-law devices and other non-linear process characteristics.

The meter provides a Max and Min reading memory with programmable capture time. The capture time is used to prevent detection of false max and min readings which may occur during burst testing or unusual process events.

The signal totalizer (integrator) can be used to compute a time-input product. This can be used to provide a readout of totalized flow, calculate service intervals of motors and pumps, etc. The totalizer can also accumulate batch weighing operations.

The meter has four set-point outputs, implemented on Plug-in option cards. The Plug-in cards provide dual FORM-C relays (5 A), quad FORM-A (3 A), or either quad sinking or quad sourcing open collector logic outputs. The set-point alarms can be configured to suit a variety of control and alarm requirements.

Communication and Bus Capabilities are also available as option cards. These include RS-232, RS-485, Modbus, DeviceNet, Profibus-DP and USB. Readout values and set-point alarm values can be controlled through the bus. Additionally, the meter has a feature that allows a remote computer to directly control the outputs of the meter. With an RS-232, RS-485 or USB card installed, it is possible to configure the meter using Windows.


A linear DC output signal is available as an optional Plug-in card. The card provides either 20 mA or 10 V signals. The output can be scaled independent of the input range and can track either the input, totalizer, max or min readings.

Once the meter has been initially configured, the parameter list may be locked out from further modification in its entirety or only the set-point values can be made accessible.

The meters have been specifically designed for harsh industrial environments. With NEMA 4X/IP65 sealed bezel and extensive testing of noise effects to CE requirements, the meter provides a tough yet reliable application solution.

2.1. Dimensions in inches (mm)

Note: Recommended minimum clearance (behind the panel) for mounting clip installation is 2.1" (53.4 mm) H x 5" (127 mm) W.

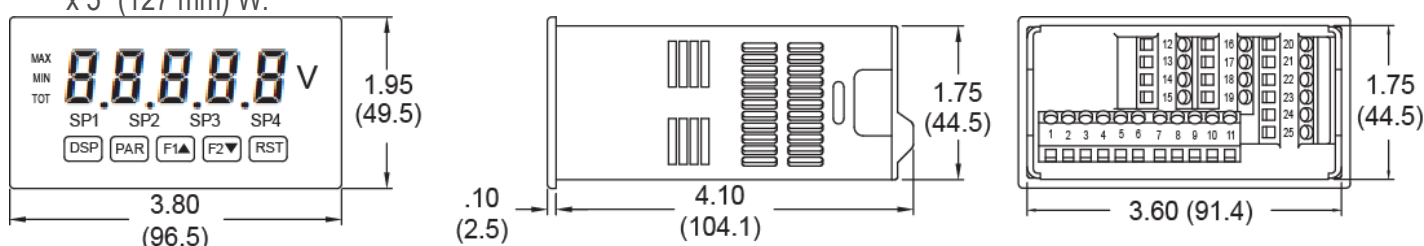

CAUTION: Read complete instructions prior to installation and operation of the unit.

CAUTION: Risk of electric shock.

2.2. Safety Summary

All safety related regulations, local codes and instructions that appear in the manual or on equipment must be observed to ensure personal safety and to prevent damage to either the instrument or equipment connected to it. If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. Do not use this unit to directly command motors, valves, or other actuators not equipped with safeguards. To do so can be potentially harmful to persons or equipment in the event of a fault to the unit.

3. SPECIFICATIONS

3.1. Display

5 digit, 0.56" (14.2 mm) red sunlight readable LEDs, (-19999 to 99999)

3.2. Power

AC Versions (INDI-PAXS): AC Power: 85 to 250 VAC, 50/60 Hz, 15 VA

Isolation: 2300 Vrms for 1 min. to all inputs and outputs.

DC Versions (INDI-PAXS24): DC Power: 11 to 36 VDC, 11 W (Derate operating temperature to 40°C if operating <15 VDC and three plug-in cards are installed)

AC Power: 24 VAC, $\pm 10\%$, 50/60 Hz, 15 VA

Isolation: 500 Vrms for 1 min. to all inputs and outputs (50V working).

3.3. Annunciators

MAX - max readout selected

MIN - min. readout selected

TOT - totalizer readout selected, flashes when total overflows

SP1 - set-point alarm 1 is active

SP2 - set-point alarm 2 is active

SP3 - set-point alarm 3 is active

SP4 - set-point alarm 4 is active

Units Label - software controlled units label backlight

3.4. Keypad

3 programmable multi-function keys, 5 keys total

3.5. A/d converter

16 bit resolution

3.6. Update rates

A/D conversion rate: 20/readings sec

Step response: 200 msec. max. to within 99% of final readout value (digital filter and internal zero correction disabled)¹

700 msec. max. (digital filter disabled, internal zero correction enabled)¹

Display update rate: 1 to 20 updates/sec

Set-point output on/off delay time: 0.0 to 3275.0 sec

Analog output update rate: 0.0 to 10.0 sec

Max./Min. capture delay time: 0.0 to 3275.0 sec

3.7. Display messages

"LOL" - Appears when measurement exceeds +signal range

"ULUL" - Appears when measurement exceeds - signal range

"..." - Appears when display values exceed + display range

"-..." - Appears when display values exceed - display range

3.8. Connection type

4-wire bridge (differential)

2-wire (single-ended)

3.9. Common mode range (w.r.t. Input common)

0 to +5 VDC

Rejection: 80 db (DC to 120 Hz)

3.10. Sensor inputs

Input Range	Accuracy ² (18 to 28°C)	Accuracy ² (0 to 50°C)	Impedance	Max continuous overload	Resolution
± 24 mVDC	0.02% of reading +3 µV	0.07% of reading +4 µV	100 MΩ	30 V	1 µV
± 240 mVDC	0.02% of reading +30 µV	0.07% of reading +40 µV	100 MΩ	30 V	10 µV

3.11. Bridge excitation

Jumper Selectable: 5 VDC @ 65 mA max., ±2%

10 VDC @ 125 mA max., ±2%

Temperature coefficient (ratio metric): 20 ppm/°C max.

¹ The meter periodically (every 12 seconds) imposes a 500 msec delay to compensate for internal zero drift. If the delay affects applications where step response is critical, it can be defeated. Set the display update to 20/sec to disable. In this case, add a zero error of 0.2% FS to the 24 mV input range over the 0 to 50°C span.

² After 20 minute warm-up. Accuracy is specified in two ways: Accuracy over an 18 to 28°C and 10 to 75% RH environment; and accuracy over a 0 to 50°C and 0 to 85% RH (non-condensing environment). Accuracy over the 0 to 50°C range includes the temperature coefficient effect of the meter.

3.12. Low frequency noise rejection

Normal Mode: > 60 dB @50 or 60 Hz ±1%, digital filter off

Common Mode: >100 dB, DC to 120 Hz (w.r.t. earth)

3.13. User inputs (logic level)

Three programmable user inputs, jumper selectable for sink/source logic

Max. Continuous Input: 30 VDC

Isolation to sensor input common: Not isolated

Response Time: 50 msec. max.

Logic State: Jumper selectable for sink/source logic.

Input state	Sinking inputs 22 kΩ pull-up to +5 V	Sourcing inputs 22 kΩ pull-down
Active	V _{IN} < 0.7 VDC	V _{IN} > 2.5 VDC
Inactive	V _{IN} > 2.5 VDC	V _{IN} < 0.7 VDC

3.14. Totalizer

Time Base: second, minute, hour or day

Time Accuracy: 0.01% typical

Decimal Point: 0 to 0.0000

Scale Factor: 0.001 to 65.000

Low Signal Cut-out: -19.999 to 99.999

Total: 9 digits, display alternates between high order and low order readouts

3.15. Custom linearization

Data Point Pairs: Selectable from 2 to 16

Display Range: -19.999 to 99.999

Decimal Point: 0 to 0.0000

3.16. Memory

Nonvolatile EEPROM retains all programmable parameters and display values.

3.17. Certifications and compliances

UL Recognized Component, File #E179259, UL61010A-1, CSA C22.2 No. 61010-1

UL Listed, File # E137808, UL508, CSA C22.2 No. 14-M95 LISTED by Und. Lab. Inc. to U.S. and Canadian safety standards

Type 4X Enclosure rating (Face only), UL50

IECEE CB Scheme Test Report #04ME11209-20041018

Issued by Underwriters Laboratories, Inc.

IEC 61010-1, EN 61010-1: Safety requirements for electrical equipment for measurement, control, and laboratory use, Part I

IP65 Enclosure rating (Face only), IEC 529

IP20 Enclosure rating (Rear of unit), IEC 529

3.18. Electromagnetic compatibility

Emissions and Immunity to EN 61326:2006: Electrical Equipment for Measurement, Control and Laboratory use.

Immunity to industrial locations

Electrostatic discharge	EN 61000-4-2	Criterion A 4 kV contact discharge 8 kV air discharge
Electromagnetic RF fields	EN 61000-4-3	Criterion A* 10 V/m (80 MHz to 1 GHz) 3 V/m (1.4 GHz to 2 GHz) 1 V/m (2 GHz to 2.7 GHz)
Fast transients (burst)	EN 61000-4-4	Criterion B 2 kV power 1 kV I/O signal 2 kV I/O signal connected to power
Surge	EN 61000-4-5	Criterion A power 3 kV signal 1 kV
RF conducted interference	EN 61000-4-6	Criterion A 3 Vrms
Power freq. magnetic fields	EN 61000-4-8	Criterion A 30 A/m
AC power	EN 61000-4-11	voltage dip Criterion A 0% during 1 cycle 40% during 10/12 cycle 70% during 25/30 cycle short interruptions Criterion C 0% during 250/300 cycles

Emissions

Emissions EN 55011 Class A

Criterion A: Normal operation within specified limits.

Criterion B: Temporary loss of performance from which the unit self recovers.

Criterion C: Temporary loss of function where system reset occurs.

* Self-recoverable loss of performance during EMI disturbance at 10 V/m :

- Measurement input and/or analog output signal may deviate during EMI disturbance.

For operation without loss of performance:

- Unit is mounted in a metal enclosure (Buckeye SM7013-0 or equivalent)
- I/O and power cables are routed in metal conduit connected to earth ground.

Refer to EMC Installation Guidelines section of the bulletin for additional information.

3.19. Environmental conditions

Operating Temperature Range: 0 to 50°C (0 to 45°C with all three plug-in cards installed)

Vibration According to IEC 68-2-6: Operational 5 to 150 Hz, in X, Y, Z direction for 1.5 hours, 2 g.

Shock According to IEC 68-2-27: Operational 25 g (10 g relay), 11 msec in 3 directions.

Storage Temperature Range: -40 to 60°C

Operating and Storage Humidity: 0 to 85% max. RH non-condensing

Altitude: Up to 2000 meters

3.20. Connections

High compression cage-clamp terminal block

Wire Strip Length: 0.3" (7.5 mm)

Wire Gauge: 30-14 AWG copper wire

Torque: 4.5 inch-lbs (0.51 N·m) max.

3.21. Construction

This unit is rated for NEMA 4X/IP65 outdoor use. IP20 Touch safe. Installation Category II, Pollution Degree 2. One piece bezel/case. Flame resistant. Synthetic rubber keypad. Panel gasket and mounting clip included.

3.22. Weight

10.4 oz. (295 g)

4. ORDERING INFORMATION

TYPE	MODEL NO.	DESCRIPTION	PART NUMBER
Meter	INDI-PAXS	Strain Bridge Input Panel Meter, Upgradeable, 85...250 VAC Powered	INDI-PAXS
		Strain Bridge Input Panel Meter, Upgradeable, 10...30 VDC/24 VAC Powered	INDI-PAXS24
		Dual Set-point Relay Output Card	CARD-CDS-10
		Quad Set-point Relay Output Card	CARD-CDS-20
Optional Plug-in Cards	CARD-CDS	Quad Set-point Sinking Open Collector Output Card	CARD-CDS-30
		Quad Set-point Sourcing Open Collector Output Card	CARD-CDS-40
	CARD-CDC	RS-485 Serial Communications Card	CARD-CDC-10
		RS-232 Serial Communications Card	CARD-CDC-20
		DeviceNet Communications Card	CARD-CDC-30
		MODBUS Communications Card	CARD-CDC-40
		Profibus-DP Communications Card	CARD-CDC-50
	CARD-PAX-USB	USB Communications Card	CARD-PAX-USB
	CARD-CDL	Analog Output Card	CARD-CDL-10

5. ADDING OPTION CARDS

The INDI-PAXS meters can be fitted with up to three optional plugin cards. The details for each plug-in card can be reviewed in the specification section below. Only one card from each function type can be installed at one time.

The function types include Set-point Alarms (CARD-CDS), Communications (CARD-CDC), and Analog Output (CARD-CDL). The plug-in cards can be installed initially or at a later date.

5.1. Communication cards (CARD-CDC)

A variety of communication protocols are available for the INDI-PAXS. Only one of these cards can be installed at a time. When programming the unit the RS-232, RS-485, or USB Cards must be used.

CARD-CDC10 - RS-485 Serial

CARD-CDC20 - RS-232 Serial

CARD-CDC30 - DeviceNet

CARD-CDC40 - Modbus

CARD-CDC50 - Profibus-DP

CARD-PAX-USB - USB (Mini B)

5.1.1. Serial communications card

Type: RS-485 or RS-232

Data: 7/8 bits

Baud: 300 to 19,200

Parity: No, Odd or Even

Bus Address: Selectable 0 to 99, Max. 32 meters per line (RS-485)

Transmit Delay: Selectable for 2 to 50 msec or 50 to 100msec (RS-485)

5.1.2. DeviceNet™ card

Compatibility: Group 2 Server Only, not UCMM capable

Baud rates: 125k, 250k, and 500k

Bus Interface: Phillips 82C250 or equivalent with MIS wiring protection per DeviceNet™ Volume I Section 10.2.2.

Node Isolation: Bus powered, isolated node

5.1.3. Modbus card

Type: RS-485; RTU and ASCII MODBUS modes

Baud Rates: 300 to 38400.

5.2. Set-point cards (CARD-CDS)

The INDI-PAXS has 4 available set-point alarm output plug-in cards. Only one of these cards can be installed at a time. (Logic state of the outputs can be reversed in the programming.) These plug-in cards include:

CARD-CDS10 - Dual Relay, FORM-C, Normally open & closed

CARD-CDS20 - Quad Relay, FORM-A, Normally open only

CARD-CDS30 - Isolated quad sinking NPN open collector

CARD-CDS40 - Isolated quad sourcing PNP open collector

5.2.1. Dual relay card

Type: Two FORM-C relays

Contact Rating:

- One Relay Energized: 5 amps @ 120/240 VAC or 28 VDC (resistive load), 1/8 HP @120 VAC, inductive load.
- Total current with both relays energized not to exceed 5 amps

Life Expectancy: 100 K cycles min. at full load rating.

External RC snubber extends relay life for operation with inductive loads

5.2.2. Quad relay card

Type: Four FORM-A relays

Contact Rating:

- One Relay Energized: 3 amps @ 240 VAC or 30 VDC (resistive load), 1/10 HP @120 VAC, inductive load.

Data: 7/8 bits

Parity: No, Odd, or Even

Addresses: 1 to 247.

Transmit Delay: Programmable; See Transmit Delay explanation.

5.1.4. Profibus-DP card

Fieldbus Type: Profibus-DP as per EN 50170, implemented with Siemens SPC3 ASIC

Conformance: PNO Certified Profibus-DP Slave Device

Baud Rates: Automatic baud rate detection in the range 9.6K to 12M

Station Address: 0 to 125, set by rotary switches.

Connection: 9-pin Female D-Sub connector

5.1.5. USB programming card

Type: USB Virtual Comms Port

Connection: Type mini B

Baud Rate: 300 to 19.2k

Unit Address: 0 to 99; only 1 meter can be configured at a time.

- Total current with all four relays energized not to exceed 4 amps

Life Expectancy: 100K cycles min. at full load rating.
External RC snubber extends relay life for operation with inductive loads

5.2.3. Quad sinking open collector card

Type: Four isolated sinking NPN transistors.

Rating: 100 mA max @VSAT = 0.7 V max VMAX=30 V

5.2.4. Quad sourcing open connector card

Type: Four isolated sourcing PNP transistors.

Rating: Internal supply: 24 VDC \pm 10%, 30mA max total

External supply: 30 VDC max, 100 mA max each output

5.2.5. All four set-point card

Response Time:

- 200 msec. max. to within 99% of final readout value (digital filter and internal zero correction disabled)

- 700 msec. max. (digital filter disabled, internal zero correction enabled)

5.3. Linear DC output (CARD-CDL)

Either a 0(4)-20 mA or 0-10 V retransmitted linear DC output is available from the analog output plug-in card. The programmable output low and high scaling can be based on various display values. Reverse slope output is possible by reversing the scaling point positions.

CARD-CDL10 - Retransmitted Analog Output Card

5.3.1. Analog output card

Types: 0 to 20 mA, 4 to 20 mA or 0 to 10 VDC
Accuracy: 0.17%FS (18 to 28°C); 0.4%FS (0 to 50 °C)
Resolution: 1/3500
Compliance:

- 10VDC: 10 kΩ load min
- 20mA: 500 Ω load max.



Update time:

- 200 msec. max to within 99% of final output value (digital filter and internal zero correction disabled)
- 700 msec. max (digital filter disabled, internal zero correction enabled)

6. INSTALLING THE METER

6.1. Installation

The INDI-PAXS meets NEMA 4X/IP65 requirements when properly installed. The unit is intended to be mounted into an enclosed panel. Prepare the panel cutout to the dimensions shown. Remove the panel latch from the unit. Slide the panel gasket over the rear of the unit to the back of the bezel. The unit should be installed fully assembled. Insert the unit into the panel cutout.

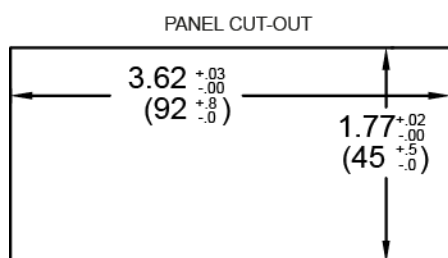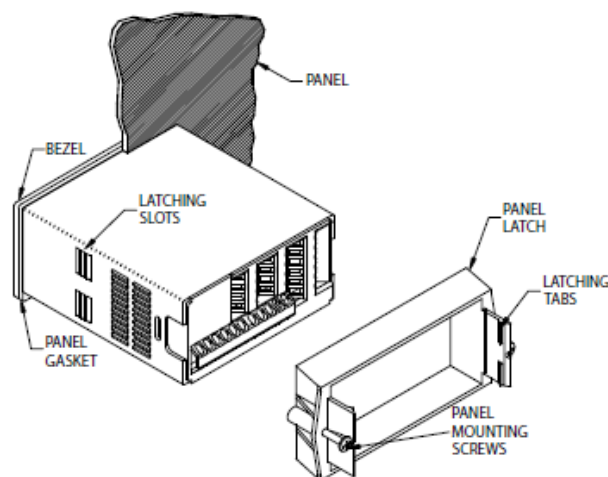

While holding the unit in place, push the panel latch over the rear of the unit so that the tabs of the panel latch engage in the slots on the case. The panel latch should be engaged in the farthest forward slot possible. To achieve a proper seal, tighten the latch screws evenly until the unit is snug in the panel (Torque to approximately 7 in-lbs [79N·cm]). Do not over-tighten the screws.

6.2. Installation Environment

The unit should be installed in a location that does not exceed the maximum operating temperature and provides good air circulation. Placing the unit near devices that generate excessive heat should be avoided. The bezel should be cleaned only with a soft cloth and neutral soap product. DO NOT use solvents. Continuous exposure to direct sunlight may accelerate the aging process of the bezel. Do not use tools of any kind (screwdrivers, pens, pencils, etc.) to operate the keypad of the unit.

7. SETTING THE JUMPERS

The meter has three jumpers that must be set prior to applying power. The three jumpers are Bridge Excitation, Input Range, and User Input Logic. The Jumper Selections Figure is an enlargement of the jumper area shown below. To access the jumpers, remove the meter base from the meter case by firmly squeezing and pulling back on the side rear finger tabs. This should lower the latch below the case slot (which is located just in front of the finger tabs). It is recommended to release the latch on one side, then start the other side latch.

7.1. Bridge Excitation


One jumper is used to select bridge excitation to allow use of the higher sensitivity 24 mV input range. Use the 5 V excitation with high output (3 mV/V) bridges. The 5 V excitation also reduces bridge power compared to 10 V excitation. A maximum of four 350 Ω load cells can be driven by the internal bridge excitation voltage.

7.2. Input Range

One jumper is used to select input range. The value selected in programming must match the jumper setting. Select a range that is high enough to accommodate the bridge output to avoid overload.

7.3. User Input Logic Jumper

One jumper is used for the logic state of all three user inputs. If the user inputs are not used, it is not necessary to check or move this jumper.

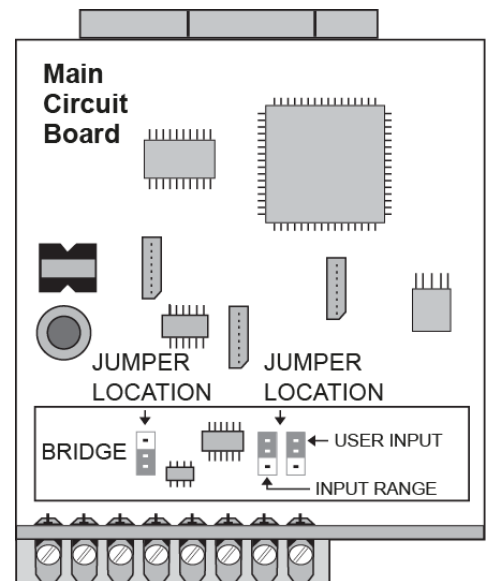

JUMPER SELECTIONS

The ☒ indicates factory setting.

BRIDGE EXCITATION	INPUT RANGE	USER INPUT
<input type="checkbox"/> 5V	<input checked="" type="checkbox"/> $\pm 24\text{mV}$	<input checked="" type="checkbox"/> SINK
<input checked="" type="checkbox"/> 10V	<input type="checkbox"/> $\pm 240\text{mV}$	<input type="checkbox"/> SOURCE

↓ REAR TERMINALS ↓

8. INSTALLING AN OPTION CARD




Caution: The option and main circuit cards contain static sensitive components. Before handling the cards, discharge static charges from your body by touching a grounded bare metal object. Ideally, handle the cards at a static controlled clean workstation. Also, only handle the cards by the edges. Dirt, oil or other contaminants that may contact the cards can adversely affect circuit operation.



Warning: Exposed line voltage exists on the circuit boards. Remove all power to the meter AND load circuits before accessing the unit.

1. Remove the main assembly from the rear of the case. Squeeze the finger holds on the rear cover or use a small screwdriver to depress the side latches to release it from the case. It is not necessary to separate the rear cover from the main circuit card.
2. Locate the option card connector for the serial communication card. Hold the unit by the rear cover, not the display board, when installing an option card.
3. Install the option card by aligning the option card with the slot in the rear cover. Be sure the connector is fully engaged and the tab on the option card rests in the alignment slot on the display board.
4. Slide the assembly back into the case. Be sure the rear cover latches fully into the case.

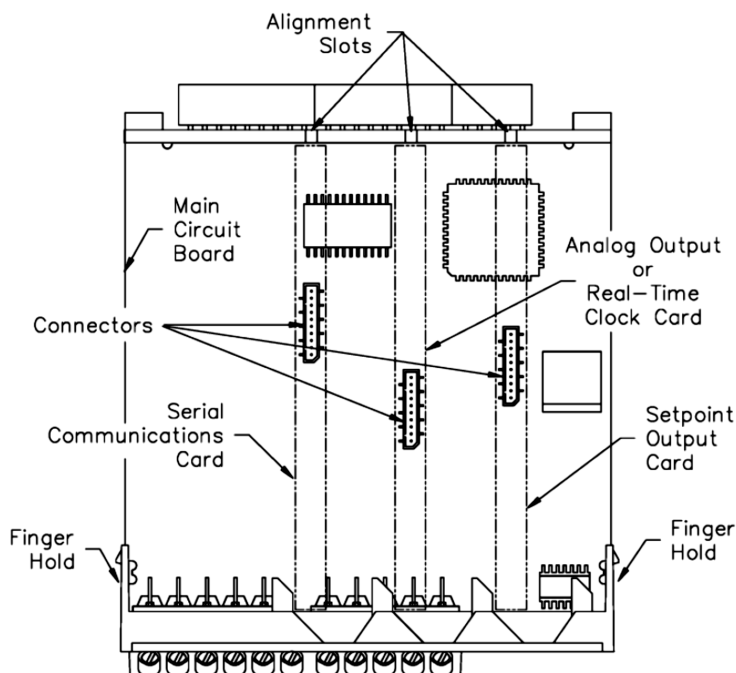

9. WIRING THE METER

9.1. Wiring overview

Electrical connections are made via screw-clamp terminals located on the back of the meter. All conductors should conform to the meter's voltage and current ratings. All cabling should conform to appropriate standards of good installation, local codes and regulations. It is recommended that power supplied to the meter (DC or AC) be protected by a fuse or circuit breaker.

When wiring the meter, compare the numbers embossed on the back of the meter case against those shown in wiring drawings for proper wire position. Strip the wire, leaving approximately 0.3" (7.5 mm) bare lead exposed (stranded wires should be tinned with solder). Insert the lead under the correct screw-clamp terminal and tighten until the wire is secure. (Pull wire to verify tightness.) Each terminal can accept up to one #14 AWG (2.55 mm) wire, two #18 AWG (1.02 mm), or four #20 AWG (0.61 mm).

9.2. EMC installation guidelines

Although this meter is designed with a high degree of immunity to Electro-Magnetic Interference (EMI), proper installation and wiring methods must be followed to ensure compatibility in each application. The type of the electrical noise, its source or the method of coupling into the unit may be different for various installations. Listed below are some EMC guidelines for successful installation in an industrial environment.

1. The meter should be mounted in a metal enclosure, which is properly connected to protective earth.

2. With use of the lower input ranges or signal sources with high source impedance, the use of shielded cable may be necessary. This helps to guard against stray AC pick-up. Attach the shield to the input common of the meter.
3. To minimize potential noise problems, power the meter from the same power branch, or at least the same phase voltage as that of the signal source.
4. Never run Signal or Control cables in the same conduit or raceway with AC power lines, conductors feeding motors, solenoids, SCR controls, and heaters, etc. The cables should be run in metal conduit that is properly grounded. This is especially useful in applications where cable runs are long and portable two-way radios are used in close proximity or if the installation is near a commercial radio transmitter.
5. Signal or Control cables within an enclosure should be routed as far away as possible from contactors, control relays, transformers, and other noisy components.
6. In extremely high EMI environments, the use of external EMI suppression devices, such as ferrite suppression cores, is effective. Install them on Signal and Control cables as close to the unit as possible. Loop the cable through the core several times or use multiple cores on each cable for additional protection. Install line filters on the power input cable to the unit to suppress power line interference. Install them near the power entry point of the enclosure. The following EMI suppression devices (or equivalent) are recommended:

Ferrite Suppression Cores for signal and control cables:

- Fair-Rite # 0443167251
- Steward #28B2029-0A0
- TDK # ZCAT3035-1330A



Line Filters for input power cables:

- Schaffner # FN610-1/07
- Corcom #1VR3
- Schaffner # FN670-1.8/07

Note: Reference manufacturer's instructions when installing a line filter.

7. Long cable runs are more susceptible to EMI pickup than short cable runs. Therefore, keep cable runs as short as possible.
8. Switching of inductive loads produces high EMI. Use of snubbers across inductive loads suppresses EMI.


9.3. Power wiring

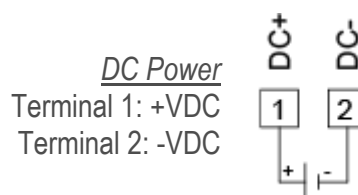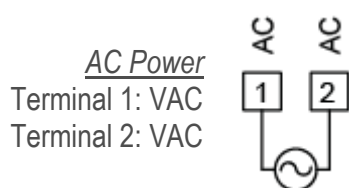


9.4. Input signal wiring

Before connecting signal wires, the Input Range Jumper should be verified for proper position.


2-wire single ended input

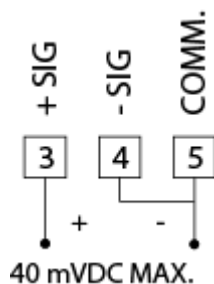

4-wire bridge input

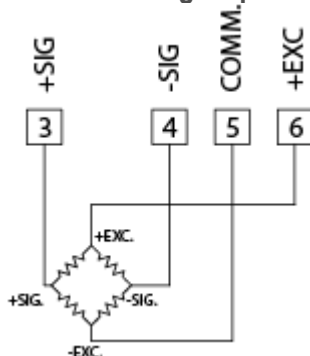

6-wire bridge input

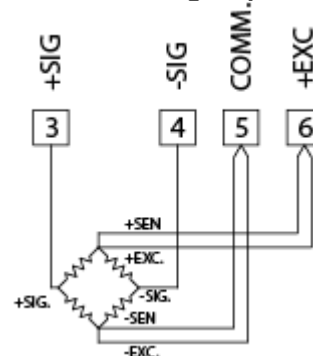

9.4.1. Deadload compensation

In some cases, the combined deadload and liveload output may exceed the range of the 24 mV input. To use this range, the output of the bridge can be offset a small amount by applying a fixed resistor across one arm of the bridge. This shifts the electrical output of the bridge downward to within the operating range of the meter. A 100 k Ω fixed resistor shifts the bridge output approximately -10 mV (350 Ω bridge, 10 V excitation).

Connect the resistor between +SIG and -SIG. Use a metal film resistor with a low temperature coefficient of resistance.

9.4.2. Bridge compensation resistors

For single strain gage applications, bridge completion resistors must be employed externally to the meter. Only use metal film resistors with a low temperature coefficient of resistance.

Load cells and pressure transducers are normally implemented as full resistance bridges and do not require bridge completion resistors.


9.5. User input wiring

Before connecting the wires, the User Input Logic Jumper should be verified for proper position. If not using User Inputs, then skip this section. Only the appropriate User Input terminal has to be wired.

Sinking Logic

In this logic, the user inputs of the meter are internally pulled up to +5 V with 22 k Ω resistance.


The input is active when it is pulled low (<0.9 V).

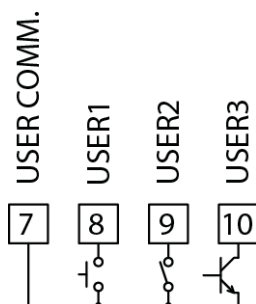


Sourcing Logic

In this logic, the user inputs of the meter are internally pulled down to 0 V with 22 k Ω resistance.

The input is active when a voltage greater than 3.6 VDC is applied.

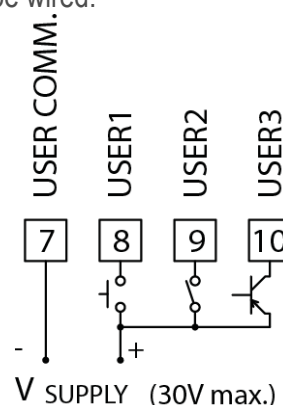

10. REVIEWING THE FRONT BUTTONS AND DISPLAY

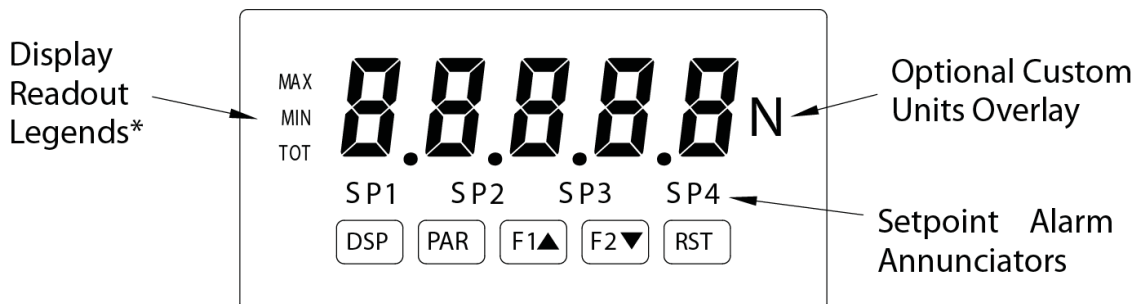


KEY	DISPLAY MODE OPERATION	PROGRAMMING MODE OPERATION
DSP	Index display through max/min/total/input readouts	Quit programming and return to display mode
PAR	Access parameter list	Store selected parameter and index to next parameter
F1▲	Function key 1; hold for 3 seconds for Second Function 1**	Increment selected parameter value
F2▼	Function key 2; hold for 3 seconds for Second Function 2**	Decrement selected parameter value
RST	Reset (function key)**	Hold with F1▲ , F2▼ to scroll value by x1000

* Display Readout Legends may be locked out in Factory Settings.

** Factory setting for the F1, F2, and RST keys is NO mode.

11. PROGRAMMING THE METER

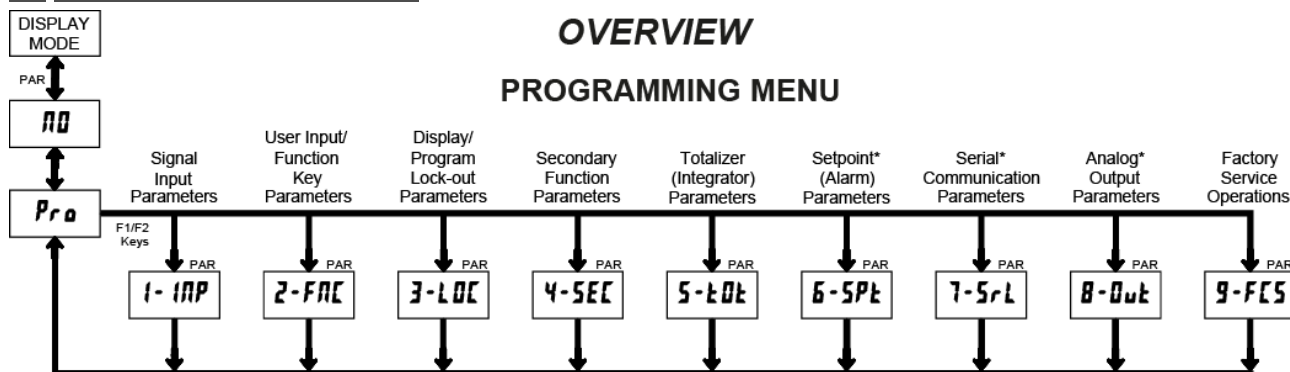

Display mode


The meter normally operates in the Display Mode. In this mode, the meter displays can be viewed consecutively by pressing the DSP key. The annunciators to the left of the display indicate which display is currently shown; Max Value (MAX), Min Value (MIN), or Totalizer Value (TOT). Each of these displays can be locked from view through programming. (See Module 3) The Input Display Value is shown with no annunciator.

Programming tips

The Programming Menu is organized into nine modules (See above). These modules group together parameters that are related in function. It is recommended to begin programming with Module 1 and proceed through each module in sequence. Note that Modules 6 through 8 are only accessible when the appropriate plug-in option card is installed. If lost or confused while programming, press the DSP key to exit programming mode and start over.

When programming is complete, it is recommended to record the meter settings on the Parameter Value Chart and lock-out parameter programming with a User Input or lock-out code. (See Modules 2 and 3 for lock-out details.)

Alternating selection display

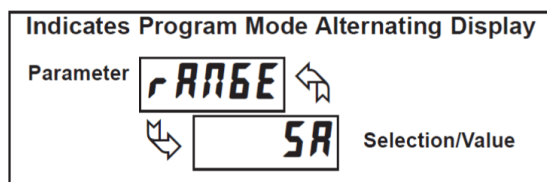

In the module description sections which follow, the dual display with arrows appears for each programming parameter. This is used to illustrate the display alternating between the parameter (top display) and the parameter's Factory Setting (bottom display). In most cases, selections or value ranges for the parameter will be listed on the right.

Step by step programming instructions

Programming mode entry (PAR key)

The Programming Mode is entered by pressing the PAR key. If this mode is not accessible, then meter programming is locked by either a security code or a hardware lock. (See Modules 2 and 3 for programming lock-out details.)

Module entry (arrow & PAR keys)

Upon entering the Programming Mode, the display alternates between Pro and the present module (initially NO). The arrow keys (F1▲ and F2▼) are used to select the desired module, which is then entered by pressing the PAR key.

Parameter (module) menu (PAR key)

Each module has a separate parameter menu. These menus are shown at the start of each module description section which follows. The PAR key is pressed to advance to a particular parameter to be changed, without changing the programming of preceding parameters. After completing a module, the display will return to Pro NO. From this point, programming may continue by selecting and entering additional modules. (See MODULE ENTRY above.)

Parameter selection entry (arrow & PAR keys)

For each parameter, the display alternates between the parameter and the present selection or value for that parameter. For parameters which have a list of selections, the arrow keys (F1▲ and F2▼) are used to sequence through the list until the desired selection is displayed. Pressing the PAR key stores and activates the displayed selection, and also advances the meter to the next parameter.


Numerical value entry (arrow, RST & PAR keys)

For parameters which require a numerical value entry, the arrow keys can be used to increment or decrement the display to the desired value. When an arrow key is pressed and held, the display automatically scrolls up or scrolls down. The longer the key is held, the faster the display scrolls. The RST key can be used in combination with the arrow keys to enter large numerical values. When the RST key is pressed along with an arrow key, the display scrolls by 1000's. Pressing the PAR key stores and activates the displayed value, and also advances the meter to the next parameter.

Programming mode exit (DSP or PAR Key at Pro NO)

The Programming Mode is exited by pressing the DSP key (from anywhere in the Programming Mode) or the PAR key (with Pro NO displayed). This will commit any stored parameter changes to memory and return the meter to the Display Mode. If a parameter was just changed, the PAR key should be pressed to store the change before pressing the DSP key. (If power loss occurs before returning to the Display Mode, verify recent parameter changes.)

11.1. Module 1 – Signal input parameters (1-IMP)

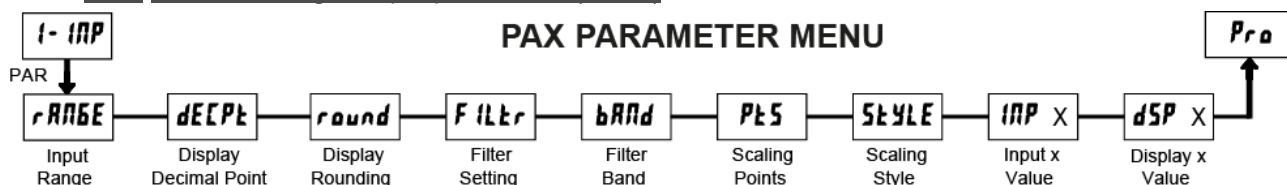

11.1.1. Input range

RANGE ↩

↩ **0.02u**

Selection

0.02u

0.2u

Range resolution

±24 mV

±240 mV

Select the input range that corresponds to the external signal. This selection should be high enough to avoid input signal overload but low enough for the desired input resolution. This selection and the position of the Input Range Jumper must match.

11.1.2. Display decimal point

DECPt ↩

↩ **0.00**

00 00 0.00 0.000 0.0000

Select the decimal point location for the Input, **MAX** and **MIN** displays. (The **TOT** display decimal point is a separate parameter.) This selection also affects **Round** and **dSPx** parameters and set-point values.

11.1.3. Display rounding

round ↩

↩ **0.01**

1 2 5 100

10 20 50 100

Rounding selections other than one, cause the Input Display to 'round' to the nearest rounding increment selected (ie. rounding of '5' causes 122 to round to 120 and 123 to round to 125). Rounding starts at the least significant digit of the Input Display. Remaining parameter entries (scaling point values, set-point values, etc.) are not automatically adjusted to this display rounding selection.

11.1.4. Filter setting

FILTER ↩

↩ **10**

0.0 to 25.0 seconds

The input filter setting is a time constant expressed in tenths of a second. The filter settles to 99% of the final display value within approximately 3 time constants. This is an Adaptive Digital Filter which is designed to steady the Input Display reading. A value of '0' disables filtering.

11.1.5. Filter band

bAND ↩

↩ **0.10**

0 to 25.0 display units

The digital filter will adapt to variations in the input signal. When the variation exceeds the input filter band value, the digital filter disengages. When the variation becomes less than the band value, the filter engages again. This allows for a stable readout, but permits the display to settle rapidly after a large process change. The value of the band is in display units. A band setting of '0' keeps the digital filter permanently engaged.

11.1.6. Scaling points

2 to 16

Linear - Scaling Points (2)



For linear processes, only 2 scaling points are necessary. It is recommended that the 2 scaling points be at opposite ends of the input signal being applied. The points do not have to be the signal limits. Display scaling will be linear between and continue past the entered points up to the limits of the Input Signal Jumper position. Each scaling point has a coordinate-pair of Input Value (**INP**) and an associated desired Display Value (**dSP**).

Nonlinear - Scaling Points (Greater than 2)

For non-linear processes, up to 16 scaling points may be used to provide a piece-wise linear approximation. (The greater the number of scaling points used, the greater the conformity accuracy.) The Input Display will be linear between scaling points that are sequential in program order. Each scaling point has a coordinate-pair of Input Value (**INP**) and an associated desired Display Value (**dSP**). Data from tables or equations, or empirical data could be used to derive the required number of segments and data values for the coordinate pairs.

11.1.7. Scaling style

KEY Key-in data

APLY Apply signal



If Input Values and corresponding Display Values are known, the Key-in (**KEY**) scaling style can be used. This allows scaling without the presence or changing of the input signal. If Input Values have to be derived from the actual input signal source or simulator, the Apply (**APLY**) scaling style must be used. After using the Apply (**APLY**) scaling style, this parameter will default back to **KEY** but the scaling values will be shown from the previous applied method.

11.1.8. Input value for scaling point 1

- 19999 to 24000



For Key-in (**KEY**), enter the known first Input Value by using the arrow keys. The Input Range selection sets up the decimal location for the Input Value. For Apply (**APLY**), apply the input signal to the meter, adjust the signal source externally until the desired Input Value appears. In either method, press the **PAR** key to enter the value being displayed.

*Note: **APLY** style - Pressing the **RST** key will advance the display to the next scaling display point without storing the input value.*

11.1.9. Display value for scaling point 1

- 19999 to 99999



Enter the first coordinating Display Value by using the arrow keys. This is the same for **KEY** and **APLY** scaling styles. The decimal point follows the **dECP1** selection.

11.1.10. Input value for scaling point 2

- 19999 to 24000



For Key-in (**KEY**), enter the known second Input Value by using the arrow keys. For Apply (**APLY**), adjust the signal source externally until the next desired Input Value appears. (Follow the same procedure if using more than 2 scaling points.)

11.1.11. Display value for scaling point 2




- 19999 to 99999

Enter the second coordinating Display Value by using the arrow keys. This is the same for *PEY* and *RPLY* scaling styles. (Follow the same procedure if using more than 2 scaling points.)

General notes on scaling

1. Input Values for scaling points should be confined to the limits of the Input Range Jumper position.
2. The same Input Value should not correspond to more than one Display Value. (Example: 20 mV can not equal 0 and 10.) This is referred to as read out jumps (vertical scaled segments).
3. The same Display Value can correspond to more than one Input Value. (Example: 0 mV and 20 mV can equal 10.) This is referred to as readout dead zones (horizontal scaled segments).
4. The maximum scaled Display Value spread between range maximum and minimum is limited to 65535. For example using +20 mV range the maximum +20 mV can be scaled to is 32767 with 0 mV being 0 and Display Rounding of 1. (Decimal points are ignored.) The other half of 65535 is for the lower half of the range 0 to -20 mV even if it is not used. With Display Rounding of 2, +20 mV can be scaled for 65535 (32767 x 2) but with even Input Display values shown.
5. For input levels beyond the first programmed Input Value, the meter extends the Display Value by calculating the slope from the first two coordinate pairs (*INP 1/dSP 1* & *INP 2/dSP 2*). If *INP 1*=4mV and *dSP 1*=0, then 0mV would be some negative Display Value. This could be prevented by making *INP 1*=0 mV/*dSP 1*=0, *INP 2*=4 mV/*dSP 2*=0, with *INP 3*=20 mV/*dSP 3*= the desired high Display Value. The calculations stop at the limits of the Input Range Jumper position.
6. For input levels beyond the last programmed Input Value, the meter extends the Display Value by calculating the slope from the last two sequential coordinate pairs. If three coordinate pair scaling points were entered, then the Display Value calculation would be between *INP 2/dSP 2* & *INP 3/dSP 3*. The calculations stop at the limits of the Input Range Jumper position.

11.2. Module 2 – User input and front panel function key parameters (2-fnc)

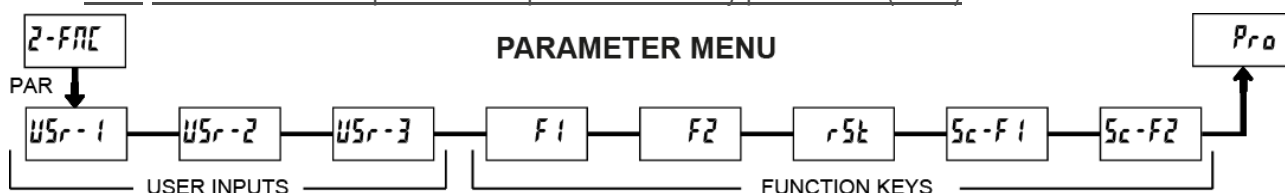

The three user inputs are individually programmable to perform specific meter control functions. While in the Display Mode or Program Mode, the function is executed the instant the user input transitions to the active state.


The front panel function keys are also individually programmable to perform specific meter control functions. While in the Display Mode, the primary function is executed the instant the key is pressed. Holding the function key for three seconds executes a secondary function. It is possible to program a secondary function without a primary function.

In most cases, if more than one user input and/or function key is programmed for the same function, the maintained (level trigger) actions will be performed while at least one of those user inputs or function keys are activated. The momentary (edge trigger) actions will be performed every time any of those user inputs or function keys transition to the active state.


Note: In the following explanations, not all selections are available for both user inputs and front panel function keys. Alternating displays are shown with each selection.

Those selections showing both displays are available for both. If a display is not shown, it is not available for that selection. *U5r-1* will represent all three user inputs. *F1* will represent all five function keys.


11.2.1. No function

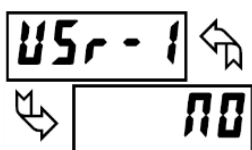

No function is performed if activated. This is the factory setting for all user inputs and function keys. No function can be selected without affecting basic start-up.

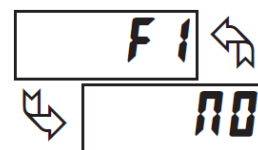


11.2.2. Programming Lock-Out

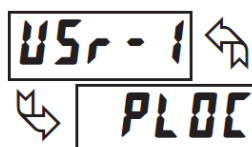


Programming Mode is locked-out, as long as activated (maintained action). A security code can be configured to allow programming access during lock-out.

11.2.3. Zero (tare) display

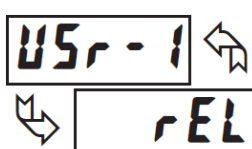


The Zero (Tare) Display provides a way to zero the Input Display value at various input levels, causing future Display readings to be offset. This function is useful in weighing applications where the container or material on the scale should not be included in the next measurement value. When

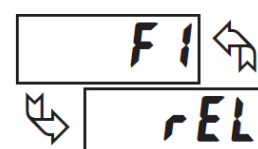


activated (momentary action), **rESEt** flashes and the Display is set to zero. At the same time, the Display value (that was on the display before the Zero Display) is subtracted from the Display Offset Value and is automatically stored as the new Display Offset Value (**OFFSt**). If another Zero (tare) Display is performed, the display will again change to zero and the Display reading will shift accordingly.

11.2.4. Relative/absolute display

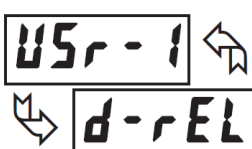


This function will switch the Input Display between Relative and Absolute. The Relative is a net value that includes the Display Offset Value. The Input Display will normally show the Relative unless switched by this function. Regardless of the display selected, all meter functions continue to operate based

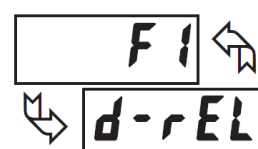


on relative values. The Absolute is a gross value (based on Module 1 **DSP** and **INP** entries) without the Display Offset Value. The Absolute display is selected as long as the user input is activated (maintained action) or at the transition of the function key (momentary action). When the user input is released, or the function key is pressed again, the input display switches back to Relative display. **AbS** (absolute) or **rEL** (relative) is momentarily displayed at transition to indicate which display is active.

11.2.5. Hold display

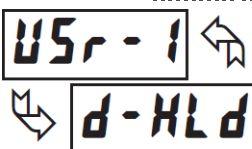


The shown display is held but all other meter functions continue as long as activated (maintained action).

11.2.6. Hold all functions

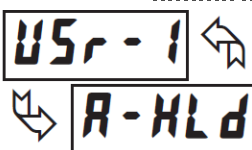


The meter disables processing the input, holds all display contents, and locks the state of all outputs as long as activated (maintained action). The serial port continues data transfer.

11.2.7. Synchronize meter reading

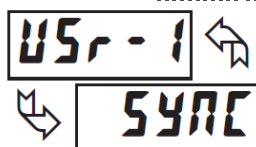


The meter suspends all functions as long as activated (maintained action). When the user input is released, the meter synchronizes the restart of the A/D with other processes or timing events.


11.2.8. Store batch reading in totalizer

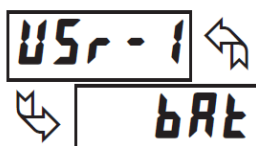

The Input Display value is one time added (batched) to the Totalizer at transition to activate (momentary action). The Totalizer retains a running sum of each batch operation until the Totalizer is reset. When this function is selected, the normal operation of the Totalizer is overridden.

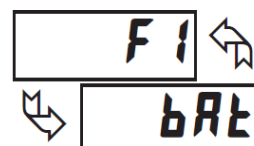


11.2.9. Select totalizer display

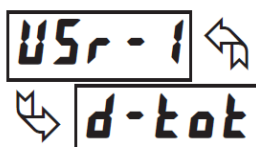


The Totalizer display is selected as long as activated (maintained action). When the user input is released, the Input Display is returned. The **DSP** key overrides the active user input. The Totalizer continues to function including associated outputs independent of being displayed.


11.2.10. Reset totalizer

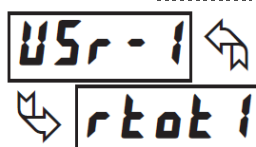

When activated (momentary action), **rESEt** flashes and the Totalizer resets to zero. The Totalizer then continues to operate as it is configured. This selection functions independent of the selected display.

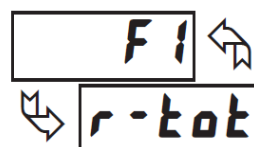


11.2.11. Reset and enable totalizer

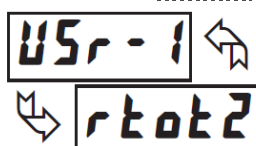


When activated (momentary action), **rESEt** flashes and the Totalizer resets to zero. The Totalizer continues to operate while active (maintained action). When the user input is released, the Totalizer stops and holds its value. This selection functions independent of the selected display.

11.2.12. Enable totalizer

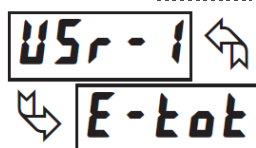

The Totalizer continues to operate as long as activated (maintained action). When the user input is released, the Totalizer stops and holds its value. This selection functions independent of the selected display.


11.2.13. Select maximum display

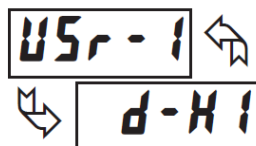


The Maximum display is selected as long as activated (maintained action). When the user input is released, the Input Display returns. The **DSP** key overrides the active user input. The Maximum continues to function independent of being displayed.

11.2.14. Reset maximum

When activated (momentary action), **rESEt** flashes and the Maximum resets to the present Input Display value. The Maximum function then continues from that value. This selection functions independent of the selected display.

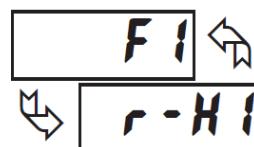


11.2.15. Reset, select, enable maximum display

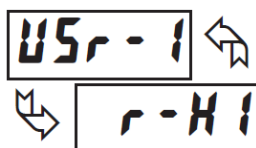

When activated (momentary action), the Maximum value is set to the present Input Display value. Maximum continues from that value while active (maintained action). When the user input is released, Maximum detection stops and holds its value. This selection functions independent of the selected display. The **DSP** key overrides the active user input display but not the Maximum function.


11.2.16. Select minimum display

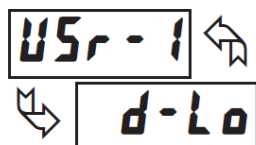


The Minimum display is selected as long as activated (maintained action). When the user input is released, the Input Display is returned. The **DSP** key overrides the active user input. The Minimum continues to function independent of being displayed.

11.2.17. Reset minimum

When activated (momentary action), **r-ESEt** flashes and the Minimum reading is set to the present Input Display value. The Minimum function then continues from that value. This selection functions independent of the selected display.

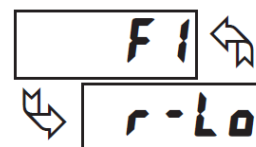


11.2.18. Reset, select, enable minimum display

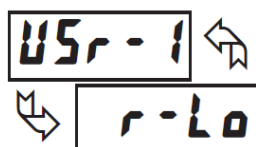


When activated (momentary action), the Minimum value is set to the present Input Display value. Minimum continues from that value while active (maintained action). When the user input is released, Minimum detection stops and holds its value. This selection functions independent of the selected display. The **DSP** key overrides the active user input display but not the Minimum function.


11.2.19. Reset maximum and minimum

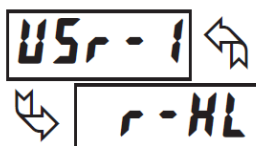


When activated (momentary action), **r-ESEt** flashes and the Maximum and Minimum readings are set to the present Input Display value. The Maximum and Minimum function then continues from that value. This selection functions independent of the selected display.

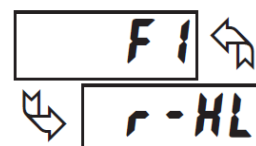

11.2.20. Change display intensity level

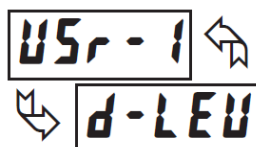

When activated (momentary action), the display intensity changes to the next intensity level (of 4). The four levels correspond to Display Intensity Level (**d-LEu**) settings of 0, 3, 8, and 15. The intensity level, when changed via the User Input/Function Key, is not retained at power-down, unless Quick Programming or Full Programming mode is entered and exited. The meter will power-up at the last saved intensity level.

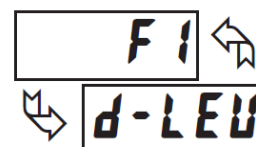



11.2.21. Set-point selection

The following selections are accessible only with the Set-point plug-in card installed. Refer to the card's manual for an explanation of their operation.

Set-point card only	L 15t	Select main or alternate set-points
	r - 1	Reset Set-point 1 (Alarm 1)
	r - 2	Reset Set-point 2 (Alarm 2)
	r - 3	Reset Set-point 3 (Alarm 3)
	r - 4	Reset Set-point 4 (Alarm 4)
	r - 34	Reset Set-point 3 & 4 (Alarm 3 & 4)
	r - 234	Reset Set-point 2, 3 & 4 (Alarm 2, 3 & 4)
	r - ALL	Reset Set-point All (Alarm All)

11.2.22. Select set-point list



Two lists of values are available for **SP-1**, **SP-2**, **SP-3**, **SP-4**. The two lists are named **L 5t - A** and **L 5t - B**. If a user input is used to select the list then **L 5t - A** is selected when the user input is not active and **L 5t - B** is selected when the user input is active (maintained action). If a front panel key is used to select the list then the list will toggle for each key press (momentary action). The display will only indicate which list is active when the list is changed.

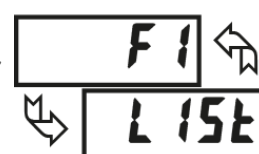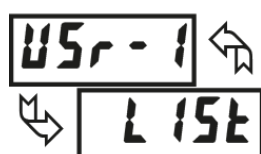


To program the values for **L 5t - A** and **L 5t - B**, first complete the programming of all the parameters. Exit programming and switch to the other list. Re-enter programming and enter the values for **SP-1**, **SP-2**, **SP-3**, **SP-4**. If any other parameters are changed then the other list values must be reprogrammed.

11.2.23. Print request

The meter issues a block print through the serial port when activated. The data transmitted during a print request is programmed in Module 7. If the user input is still active after the transmission is complete (about 100msec), an additional transmission occurs. As long as the user input is held active, continuous transmissions occur.

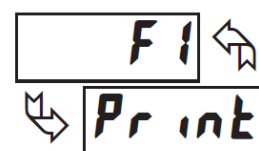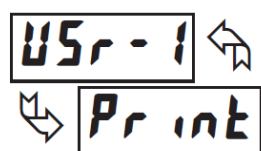

11.3. Module 3 - Display and program lock-out parameter (3-Loc)

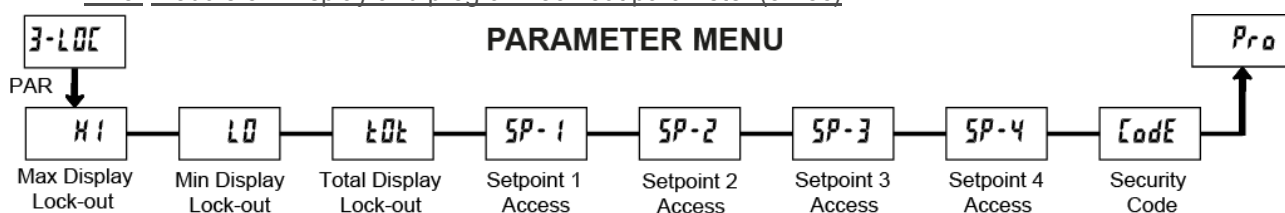

Module 3 is the programming for Display lock-out and "Full" and "Quick" Program lock-out.

When in the Display Mode, the available displays can be read consecutively by repeatedly pressing the **DSP** key. An annunciator indicates the display being shown. These displays can be locked from being visible. It is recommended that the display be set to **LOC** when the corresponding function is not used.

SELECTION DESCRIPTION


rEd	Visible in display mode
LOC	Not visible in display mode

"Full" Programming Mode permits all parameters to be viewed and modified. This Programming Mode can be locked with a security code and/or user input. When locked and the **PAR** key is pressed, the meter enters a

Quick Programming Mode. In this mode, the set-point values can still be read and/or changed per the selections below. The Display Intensity Level (**d-LEU**) parameter also appears whenever Quick Programming Mode is enabled and the security code is greater than zero.


SELECTION	DESCRIPTION
rEd	Visible but not changeable in Quick Programming Mode
ENt	Visible and changeable in Quick Programming Mode
LOC	Not visible in Quick Programming Mode

11.3.1. Maximum, minimum and totalizer display lock-out

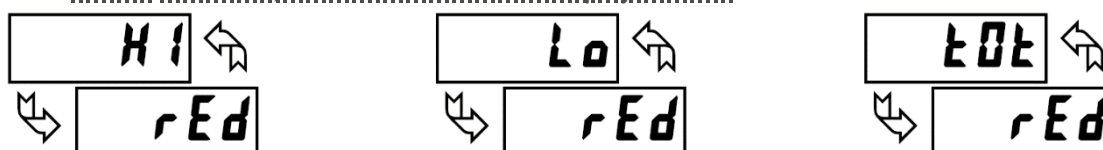

These displays can be programmed for **LOC** or **rEd**. When programmed for **LOC**, the display will not be shown when the **DSP** key is pressed regardless of Program Lock-out status. It is suggested to lock-out the display if it is not needed. The associated function will continue to operate even if its display is locked-out.

11.3.2. SP-1 SP-2 SP-3 SP-4 set-point access

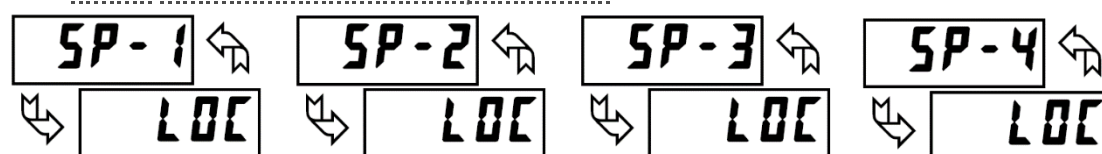

The set-point displays can be programmed for **LOC**, **rEd** or **ENt** (See the following table). Accessible only with the Set-point plug-in card installed.

11.3.3. Program mode security code

2 to 250



By entering any non-zero value, the prompt **Code 0** will appear when trying to access the Program Mode. Access will only be allowed after entering a matching security code or universal code of **222**. With this lock-out, a user input would not have to be configured for Program Lock-out. However, this lock-out is overridden by an inactive user input configured for Program Lock-out.


11.3.4. Programming mode access

SECURITY CODE	USER INPUT CONFIGURED	USER INPUT STATE	WHEN PAR KEY IS PRESSED	"FULL" PROGRAMMING MODE ACCESS
0	not PLOC	-	"Full" Programming	Immediate access.
>0	not PLOC	-	Quick Programming w/Display Intensity	After Quick Programming with correct code # at Code prompt.
>0	PLOC	Active	"Full" Programming	Immediate access.
>0	PLOC	Not active	Quick Programming	No access
0	PLOC	Active	"Full" Programming	Immediate access.
0	PLOC	Not Active	"Full" Programming	Immediate access.

Throughout this document, Programming Mode (without Quick in front) always refers to "Full" Programming (all meter parameters are accessible).

11.4. Module 4 – secondary function parameters (4-SEC)

PARAMETER MENU

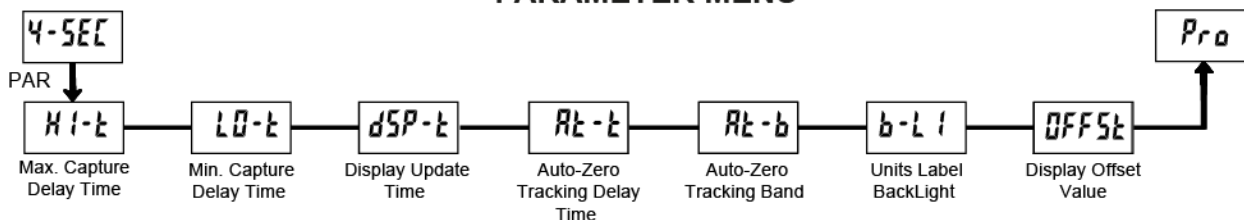

11.4.1. Max capture delay time



0.0 to 3275.0 sec

When the Input Display is above the present MAX value for the entered delay time, the meter will capture that display value as the new MAX reading. A delay time helps to avoid false captures of sudden short spikes.

11.4.2. Min capture delay time



0.0 to 3275.0 sec

When the Input Display is below the present MIN value for the entered delay time, the meter will capture that display value as the new MIN reading. A delay time helps to avoid false captures of sudden short spikes.


11.4.3. Display update rate



1 2 5 10 20 Updates/sec

This parameter determines the rate of display update. When set to 20 updates/second, the internal re-zero compensation is disabled, allowing for the fastest possible output response.

11.4.4. Auto-zero tracking/Auto-zero band

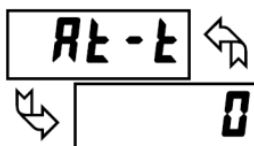


0 to 250 sec.

The meter can be programmed to automatically compensate for zero drift. Drift may be caused by changes in the transducers or electronics, or accumulation of material on weight systems.

Auto-zero tracking operates when the readout remains within the tracking band for a period of time equal to the tracking delay time. When these conditions are met, the meter re-zeroes the readout. After the re-zero operation, the meter resets and continues to auto-zero track.

The auto-zero tracking band should be set large enough to track normal zero drift, but small enough to not interfere with small process inputs.

For filling operations, the fill rate must exceed the auto-zero tracking rate. This avoids false tracking at the start of the filling operation.

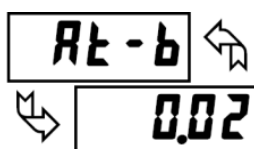


1 to 4095

$$\text{Fill Rate} \geq \frac{\text{tracking band}}{\text{tracking time}}$$

Auto-zero tracking is disabled by setting the auto-zero tracking parameter = 0.

11.4.5. Unites label backlight

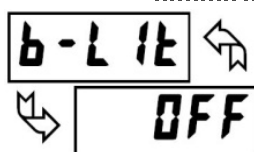

ON

OFF

The Units Label Kit Accessory contains a sheet of custom unit overlays which can be installed in to the meter's bezel display assembly. The backlight for these custom units is activated by this parameter.


11.4.6. Display offset value



- 19999 to 19999

Unless a Zero Display was performed or an offset from Module 1 scaling is desired, this parameter can be skipped. The Display Offset Value is the difference from the Absolute (gross) Display value to the Relative (net) Display value for the same input level. The meter will automatically update this Display Offset Value after each Zero Display. The Display Offset Value can be directly keyed-in to intentionally add or remove display offset. See Relative / Absolute Display and Zero Display explanations in Module 2.

11.5. Module 5 – Totalizer (integrator) parameters (5-tot)

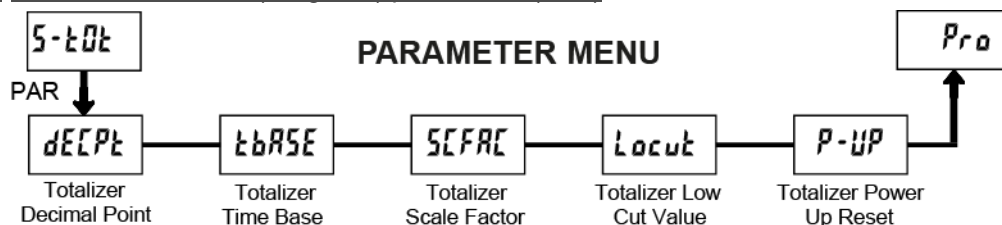

The totalizer accumulates (integrates) the Input Display value using one of two modes. The first is using a time base. This can be used to compute a time temperature product. The second is through a user input or function key programmed for Batch (one time add on demand). This can be used to provide a readout of temperature integration, useful in curing and sterilization applications. If the Totalizer is not needed, its display can be locked-out and this module can be skipped during programming.

11.5.1. Totalizer decimal point



0

0.0

0.00

0.000

0.0000

For most applications, this matches the Input Display Decimal Point (**dECPt**). If a different location is desired, refer to Totalizer Scale Factor.

11.5.2. Totalizer time base



SEC seconds (÷1)

- in minutes (÷60)

hour hours (÷3600)

dAY days (÷86400)

This is the time base used in Totalizer accumulations. If the Totalizer is being accumulated through a user input programmed for Batch, then this parameter does not apply.

11.5.3. Totalizer scale factor

0000 to 65,000



For most applications, the Totalizer reflects the same decimal point location and engineering units as the Input Display. In these cases, the Totalizer Scale Factor is 1.000. The Totalizer Scale Factor can be used to scale the Totalizer to a different value than the Input Display. Common possibilities are:


1. Changing decimal point location (example tenths to whole)
2. Average over a controlled time frame.

Details on calculating the scale factors are shown later.

If the Totalizer is being accumulated through a user input programmed for Batch, then this parameter does not apply.

11.5.4. Totalizer low cut value


- 19999 to 99999

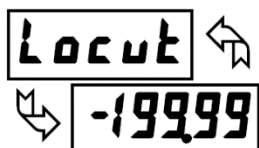

A low cut value disables Totalizer when the Input Display value falls below the value programmed.

11.5.5. Totalizer power up reset

no Do not reset buffer
rst Reset buffer

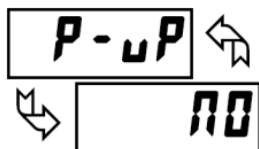

The Totalizer can be reset to zero on each meter power-up by setting this parameter to reset.

11.5.6. Totalizer high order display

When the total exceeds 5 digits, the front panel annunciator TOT flashes. In this case, the meter continues to totalize up to a 9 digit value. The high order 4 digits and the low order 5 digits of the total are displayed alternately. The letter "h" denotes the high order display. When the total exceeds a 9 digit value, the Totalizer will show "E . . ." and will stop.

11.5.7. Totalizer batching

The Totalizer Time Base and scale factor are overridden when a user input or function key is programmed for store batch (**bat**). In this mode, when the user input or function key is activated, the Input Display reading is one time added to the Totalizer (batch). The Totalizer retains a running sum of each batch operation until the Totalizer is reset. This is useful in weighing operations, when the value to be added is not based on time but after a filling event.

11.5.8. Totalizer using time table

Totalizer accumulates as defined by:

$$\frac{\text{Input Display} * \text{Totalizer scale factor}}{\text{Totalizer time base}}$$

Where:

Input Display - the present input reading

Totalizer Scale Factor - 0.001 to 65.000

Totalizer Time Base - (the division factor of **BASE**)

Example: The input reading is at a constant rate of 10.0 gallons per minute. The Totalizer is used to determine how many gallons in tenths has flowed. Because the Input Display and Totalizer are both in tenths of gallons, the Totalizer Scale Factor is 1. With gallons per minute, the Totalizer Time Base is minutes (60). By placing these values in the equation, the Totalizer will accumulate every second as follows:

$$\frac{10.0 * 1.000}{60} = 0.1667 \text{ gallon accumulated each second}$$

This results in:

10.0 gallons accumulates each minute

600.0 gallons accumulates each hour

11.5.9. Totalizer scale factor calculation examples

1. When changing the Totalizer Decimal Point (**DECPt**) location from the Input Display Decimal Point (**DECPt**), the required Totalizer Scale Factor is multiplied by a power of ten.

Example:


Input (DECPt) = 0		Input (DECPt) = 0,0		Input (DECPt) = 0.00	
<u>TOTALIZER</u>	<u>SCALE</u>	<u>TOTALIZER</u>	<u>SCALE</u>	<u>TOTALIZER</u>	<u>SCALE</u>
<u>DECPt</u>	<u>FACTOR</u>	<u>DECPt</u>	<u>FACTOR</u>	<u>DECPt</u>	<u>FACTOR</u>
0.0	10	0.00	10	0.000	10
0	1	0.0	1	0.00	1
x10	0.1	0	0.1	0.0	0.1
x100	0.01	x10	0.01	0	0.01
x1000	0.001	x100	0.001	x10	0.001

(x = Totalizer display is round by tens or hundreds)

2. To obtain an average reading within a controlled time frame, the selected Totalizer Time Base is divided by the given time period expressed in the same timing units.

Example: Average temperature per hour in a 4 hour period, the scale factor would be 0.250. To achieve a controlled time frame, connect an external timer to a user input programmed for **reset**. The timer will control the start (reset) and the stopping (hold) of the totalizer.

11.6. Module 6 – Set-point (Alarm) parameters (6-SPt)

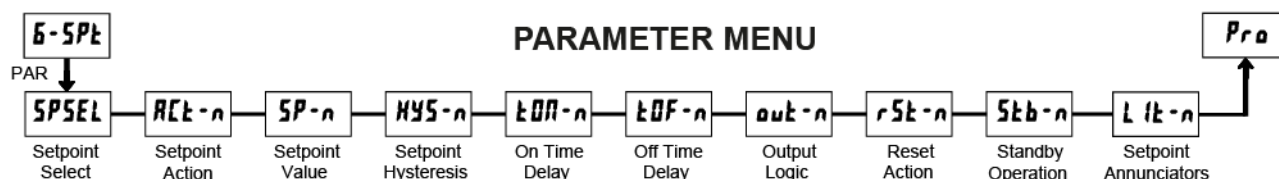

A set-point card must be installed in order to access this module.

Depending on the card installed, there will be two or four set-point outputs available. For maximum input frequency, unused Set-points should be configured for **OFF** action.

The set-point assignment and the set-point action determine certain set-point feature availability.

11.6.1. Set-point selection

SPSEL

Setpoint Select

NO

SP-1

SP-3

SP-2

SP-4

Enter the set-point (alarm output) to be programmed. The **n** in the following parameters will reflect the chosen set-point number. After the chosen set-point is completely programmed, the display will return to **SPSEL NO**. Repeat step for each set-point to be programmed. The **NO** chosen at **SPSEL** will return to **PRO NO**. The number of set-points available is set-point output card dependent.

11.6.2. Set-point action

Act-n

Setpoint Action

OFF

OFF

dE-HI

Ab-HI

dE-LO

Ab-LO

bAND

AU-HI

totLo

AU-LO

totHI

Enter the action for the selected set-point (alarm output). See Set-point Alarm Figures for a visual detail of each action.


- OFF** = Set-point always off, (returns to **SPSEL NO**)
- Ab-HI** = Absolute high, with balanced hysteresis
- Ab-LO** = Absolute low, with balanced hysteresis
- AU-HI** = Absolute high, with unbalanced hysteresis
- AU-LO** = Absolute low, with unbalanced hysteresis
- dE-HI** = Deviation high, with unbalanced hysteresis *
- dE-LO** = Deviation low, with unbalanced hysteresis *
- bAND** = Outside band, with unbalanced hysteresis *
- totLo** = Lower Totalizer absolute high, unbalance hysteresis**
- totHI** = Upper Totalizer absolute high, unbalance hysteresis**

* Deviation and band action set-points are relative to the value of set-point 1. It is not possible to configure set-point 1 as deviation or band actions. It is possible to use set-point 1 for an absolute action, while its value is being used for deviation or band.

** The lower Totalizer action **totLo** allows set-points to function off of the lower 5 digits of the Totalizer. The upper Totalizer action **totHI** allows set-points to function off of the upper 4 digits of the Totalizer. To obtain absolute low alarms for the Totalizer, program the **totLo** or **totHI** output logic as reverse.

11.6.2.1. Set-point Alarm Figures

With reverse output logic $rE u$, the below alarm states are opposite.

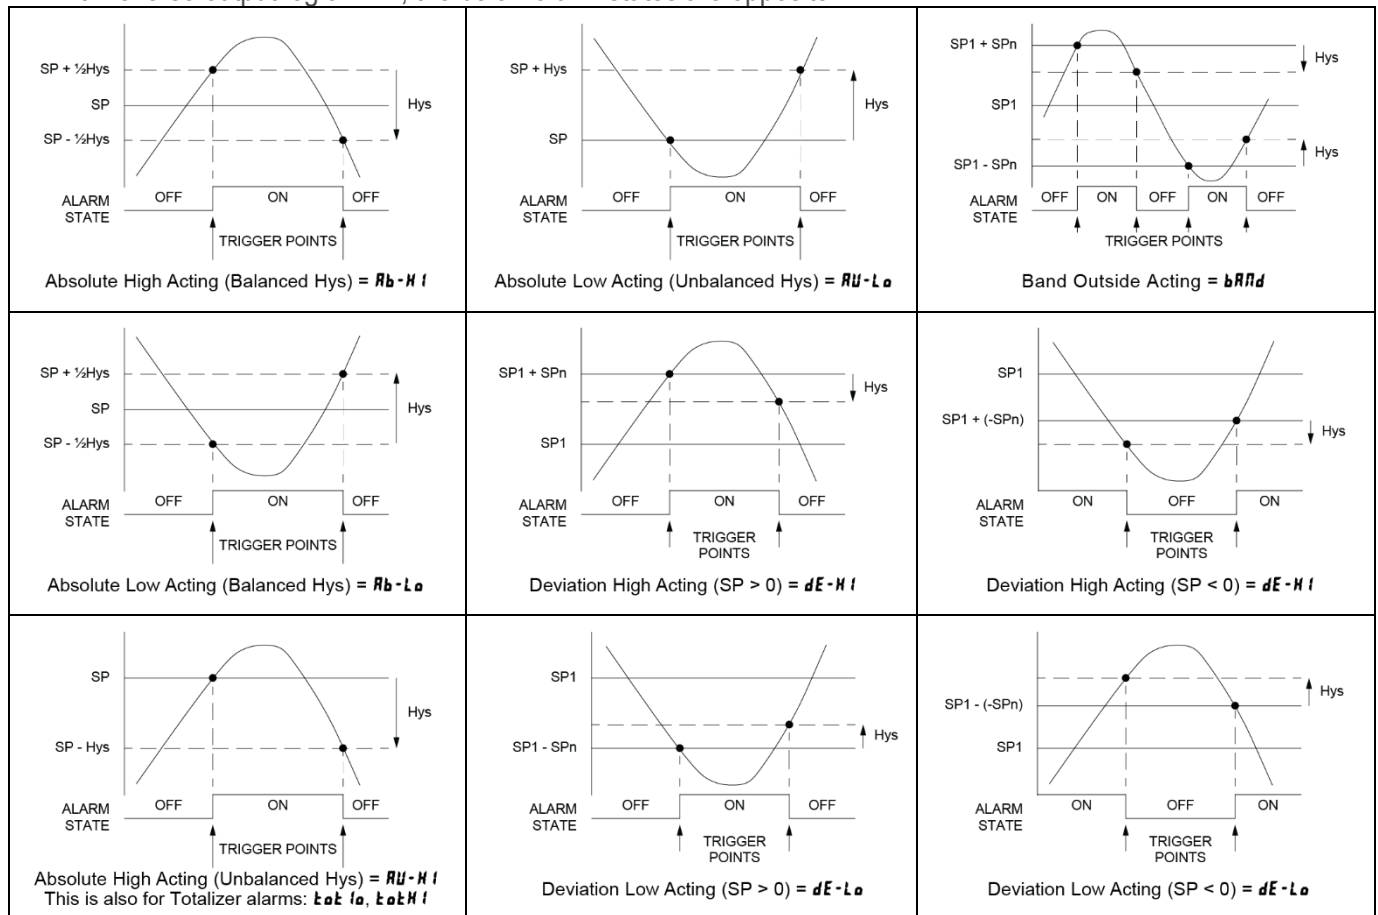

11.6.3. Set-point value


- 19999 to 99999



Enter desired set-point alarm value. These set-point values can also be entered in the Display Mode during Program Lock-out when the set-point is programmed as Enk in Parameter Module 3. When a set-point is programmed as deviation or band acting, the associated output tracks $SP1$ as it is changed. The value entered is the offset, or difference from $SP1$.

11.6.4. Hysteresis value

1 to 65000

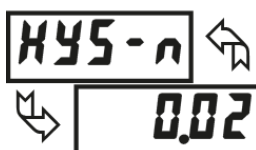

Enter desired hysteresis value. See Set-point Alarm Figures for visual explanation of how set-point alarm actions (balance and unbalance) are affected by the hysteresis. When the set-point is a control output, usually balance hysteresis is used. For alarm applications, usually unbalanced hysteresis is used. For unbalanced hysteresis modes, the hysteresis functions on the low side for high acting set-points and functions on the high side for low acting set-points.

Note: Hysteresis eliminates output chatter at the switch point, while time delay can be used to prevent false triggering during process transient events.

11.6.5. On time delay

00 to 3275.0 sec



Enter the time value in seconds that the alarm is delayed from turning on after the trigger point is reached. A value of 0.0 allows the meter to update the alarm status per the response time listed in the Specifications. When the output logic is **rEu**, this becomes off time delay. Any time accumulated at power-off resets during power-up.

11.6.6. Off time delay

00 to 3275.0 sec



Enter the time value in seconds that the alarm is delayed from turning off after the trigger point is reached. A value of 0.0 allows the meter to update the alarm status per the response time listed in the Specifications. When the output logic is **rEu**, this becomes on time delay. Any time accumulated at power-off resets during power-up.

11.6.7. Output logic




nor

rEu

Enter the output logic of the alarm output. The **nor** logic leaves the output operation as normal. The **rEu** logic reverses the output logic. In **rEu**, the alarm states in the Set-point Alarm Figures are reversed.

11.6.8. Reset action

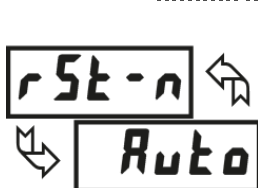

Auto

LALC1


LALC2

Enter the reset action of the alarm output

Auto = Automatic action; This action allows the alarm output to automatically reset off at the trigger points per the Set-point Action shown in Set-point Alarm Figures. The "on" alarm may be manually reset (off) immediately by a front panel function key or user input. The alarm remains reset off until the trigger point is crossed again.

LALC1 = Latch with immediate reset action; This action latches the alarm output on at the trigger point per the Set-point Action shown in Set-point Alarm Figures. Latch means that the alarm output can only be turned off by front panel function key or user input manual reset, serial reset command or meter power cycle. When the user input or function key is activated (momentary or maintained), the corresponding "on" alarm output is reset immediately and remains off until the trigger point is crossed again. (Previously latched alarms will be off if power up Display Value is lower than set-point value.)

LALC2 = Latch with delay reset action; This action latches the alarm output on at the trigger point per the Set-point Action shown in Set-point Alarm Figures. Latch means that the alarm output can only be turned off by front panel function key or user input manual reset, serial reset command or meter power cycle. When the user input or function key is activated (momentary or maintained), the meter delays the event until the corresponding "on" alarm output crosses the trigger off point. (Previously latched alarms are off if power up Display Value is lower than set-point value. During a power cycle, the meter erases a previous Latch 2 reset if it is not activated at power up.)

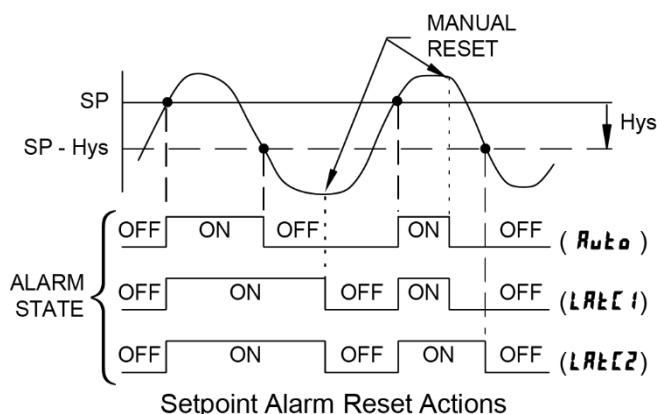


11.6.9. Standby operation



When **YES**, the alarm is disabled (after a power up) until the trigger point is crossed. Once the alarm is on, the alarm operates normally per the Set-point Action and Reset Mode.

11.6.10. Set-point annunciators

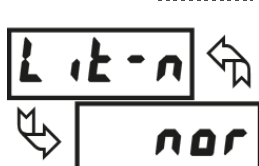


The **OFF** mode disables display set-point annunciators. The **nor** mode displays the corresponding set-point annunciators of "on" alarm outputs. The **reU** mode displays the corresponding set-point annunciators of "off" alarms outputs. The **FLASH** mode flashes the corresponding set-point annunciators of "on" alarm outputs.

11.6.11. Alternate Set-points


An Alternate list of set-point values can be stored and recalled as needed. The Alternate list allows an additional set of set-point values. (The set-point numbers nor rear terminal numbers will change in the Alternate list.) The Alternate list can only be activated through a function key or user input programmed for **L t5t** in Module 2. When the Alternate list is selected, the Main list is stored and becomes inactive. When changing between Main and Alternate, the alarm state of Auto Reset Action alarms will always follow their new value. Latched "on" alarms will always stay latched during the transition and can only be reset with a user input or function key. Only during the function key or user input transition does the display indicate which list is being used.

11.7. Module 7 – Serial communications parameters (7-SrL)

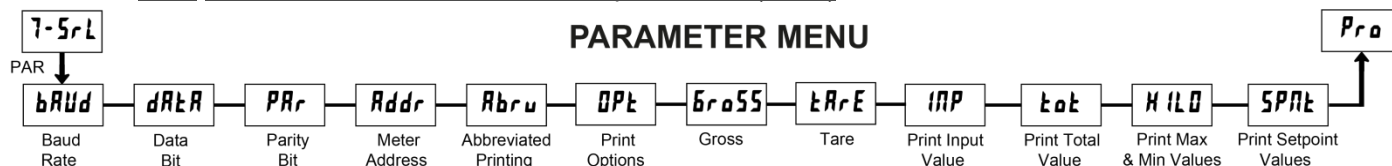

A communication card must be installed in order to access this module.

11.7.1. Baud rate

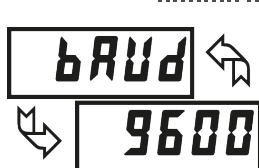


Set the baud rate to match that of other serial communications equipment. Normally, the baud rate is set to the highest value that all of the serial communications equipment is capable of transmitting.

11.7.2. Data bit



Select either 7 or 8 bit data word lengths. Set the word length to match that of other serial communication equipment. Since the meter receives and transmits 7-bit ASCII encoded data, 7 bit word length is sufficient to request and receive data from the meter.

11.7.3. Parity bit

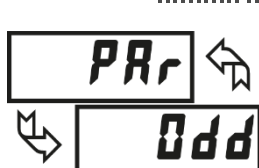

Set the parity bit to match that of the other serial communications equipment used. The meter ignores the parity when receiving data, and sets the parity bit for outgoing data. If no parity is selected with 7-bit word length the meter transmits and receives data with 2 stop bits. (For example: 10 bit frame with mark parity).

11.7.4. Meter address

0 to 99



Enter the serial node address. With a single unit on a bus, an address is not needed and a value of zero can be used (RS-232 applications). Otherwise, with multiple bussed units, a unique address number must be assigned to each meter. The node address applies specifically to RS-485 applications.

11.7.5. Abbreviated printing

YES

NO



Select abbreviated transmissions (numeric only) or full field transmission. When the data from the meter is sent directly to a terminal for display, the extra characters that are sent identify the nature of the meter parameter displayed. In this case, select **NO**. When the data from the meter goes to a computer, it may be desirable to suppress the node address and mnemonic when transmitting. In this case, set this parameter to **YES**.

11.7.6. Print option

YES

NO



YES - Enters the sub-menu to select those meter parameters to appear in the block print. For each parameter in the sub-menu select **YES** for the parameter to appear with the block print, and **NO** to disable the parameter.

Gross Value	GROSS	YES	NO
Tare Value	TARE	YES	NO
Input Value	INP	YES	NO
Max and Min Values	HIL	YES	NO
Total Value	TOT	YES	NO
Set-point values*	SPNT	YES	NO

*Set-points 1-4 are set-point plug-in card dependent.

11.7.7. Sending Commands and Data

When sending commands to the meter, a string containing at least one command character must be constructed. A command string consists of a command character, a value identifier, numerical data (if writing data to the meter) followed by the command terminator character * or \$.

11.7.7.1. Command Chart

COMMAND	DESCRIPTION	NOTES
N	Node Address Specifier	Address a specific meter. Must be followed by one or two digit node address. Not required when node address = 0.
T	Transmit Value (read)	Read a register from the meter. Must be followed by register ID character.
V	Value change (write)	Write to register of the meter. Must be followed by register ID character and numeric data.
R	Reset	Reset a register or output. Must be followed by register ID character
P	Block Print Request (read)	Initiates a block print output. Registers are defined in programming.

11.7.7.2. Command string construction

The command string must be constructed in a specific sequence. The meter does not respond with an error message to illegal commands. The following procedure details construction of a command string:

1. The first 2 or 3 characters consist of the Node Address Specifier (N) followed by a 1 or 2 character node address number. The node address number of the meter is programmable. If the node address is 0, this command and the node address itself may be omitted. This is the only command that may be used in conjunction with other commands.
2. After the optional address specifier, the next character is the command character.
3. The next character is the register ID. This identifies the register that the command affects. The P command does not require a register ID character. It prints according to the selections made in print options.
4. If constructing a value change command (writing data), the numeric data is sent next.
5. All command strings must be terminated with the string termination characters * or \$. The meter does not begin processing the command string until this character is received. See timing diagram figure for differences of * and \$ terminating characters.

11.7.7.3. Register identification chart

<u>ID</u>	<u>VALUE DESCRIPTION</u>	<u>REGISTER ID</u>	<u>APPLICABLE COMMANDS/COMMENTS</u>
A	Input	INP	T, P, R (Reset command [Ver2.5+] zeros the input ["REL" or Tare])
B	Total	TOT	T, P, R (Reset command resets total to zero)
C	Max input	MAX	T, P, R (Reset command resets MAX to current reading)
D	Min input	MIN	T, P, R (Reset command resets MIN to current reading)
E	Set-point 1	SP1	T, P, V, R (Reset command resets the set-point output)
F	Set-point 2	SP2	T, P, V, R (Reset command resets the set-point output)
G	Set-point 3	SP3	T, P, V, R (Reset command resets the set-point output)
H	Set-point 4	SP4	T, P, V, R (Reset command resets the set-point output)
I	Analog output register	AOR	T, V (Applies to manual mode)
J	Control status register	CSR	T, V
L	Absolute (gross) input display value	ABS GRS †	T, P
Q	Offset/Tare (INDI-PAXS)	OFS TAR †	T, P, V (Ver 2.5+)

† -Register ID for the INDI-PAXS.

11.7.7.4. Command String Examples

1. Node address = 17, Write 350 to Set-point 1, response delay of 2 msec min
String: N17VE350\$
2. Node address = 5, Read Input value, response delay of 50 msec min

String: N5TA*

3. Node address = 0, Reset Set-point 4 output, response delay of 50 msec min

String: RH*

11.7.7.5. Sending numeric data

Numeric data sent to the meter must be limited to 5 digits (-19.999 to 99.999). If more than 5 digits are sent, the meter accepts the last 5. Leading zeros are ignored. Negative numbers must have a minus sign. The meter ignores any decimal point and conforms the number to the scaled resolution.

(For example: the meter's scaled decimal point position = 0.0 and 25 is written to a register. The value of the register is now 2.5 In this case, write a value = 25.0).

Note: Since the meter does not issue a reply to value change commands, follow with a transmit value command for readback verification.

11.7.8. Receiving data

Data is transmitted by the meter in response to either a transmit command (T), a print block command (P) or User Function print request. The response from the meter is either a full field transmission or an abbreviated transmission. In this case, the response contains only the numeric field. The meter response mode is established in programming.

11.7.8.1. Full Field Transmission

<u>BYTE</u>	<u>DESCRIPTION</u>
1, 2	2 byte Node Address field [00-99]
3	<SP> (Space)
4-6	3 byte Register Mnemonic field
7-18	12 byte data field; 10 bytes for number, one byte for sign, one byte for decimal point (The T command may be a different byte length)
19	<CR> carriage return
20	<LF> line feed
21	<SP>* (Space)
22	<CR>* carriage return
23	<LF>* line feed

** These characters only appear in the last line of a block print.*

The first two characters transmitted are the node address, unless the node address assigned =0, in which case spaces are substituted. A space follows the node address field. The next three characters are the register ID (Serial Mnemonic).

The numeric data is transmitted next. The numeric field is 12 characters long (to accommodate the 10 digit totalizer), with the decimal point position floating within the data field. Negative value have a leading minus sign. The data field is right justified with leading spaces.

The end of the response string is terminated with a carriage return <CR> and <LF>. When block print is finished, an extra <SP><CR> <LF> is used to provide separation between the blocks.

11.7.8.2. Abbreviated transmission

<u>BYTE</u>	<u>DESCRIPTION</u>
1-12	12 byte data field, 10 bytes for number, one byte for sign, one byte for decimal point
13	<CR> carriage return
14	<LF> line feed
15	<SP>* (Space)

16 <CR>* carriage return

17 <LF>* line feed

* *These characters only appear in the last line of a block print.*

The abbreviated response suppresses the node address and register ID, leaving only the numeric part of the response.

11.7.8.3. Meter response examples

1. Node address = 17, full field response, Input = 875
17 INP 875 <CR><LF>
2. Node address = 0, full field response, Set-point 2 = -250.5
SP2 -250.5<CR><LF>
3. Node address = 0, abbreviated response, Set-point 2 = 250, last line of block print
250<CR><LF><SP><CR><LF>

11.7.9. (CSR) Control Status Register

The Control Status Register is used to both directly control the meter's outputs (set-points and analog output), and interrogate the state of the set-point outputs. The register is bit mapped with each bit position within the register assigned to a particular control function. The control functions are invoked by writing to each bit position. The bit position definitions are:

Bit 0: Set-point 1 Output Status

0 = output off

1 = output on

Bit 1: Set-point 2 Output Status

0 = output off

1 = output on

Bit 2: Set-point 3 Output Status

0 = output off

1 = output on

Bit 3: Set-point 4 Output Status

0 = output off

1 = output on

Bit 4: Manual Mode

0 = automatic mode

1 = manual mode

Bit 5: Always stays 0, even if 1 is sent.

Bit 6: Not applied

Bit 7: Always stays 0, even if 1 is sent.

Although the register is bit mapped starting with bit 7, HEX < > characters are sent in the command string. Bits 7 and 5 always stay a zero, even if a "1" is sent. This allows ASCII characters to be used with terminals that may not have extended character capabilities.

Writing a "1" to bit 4 of CSR selects manual mode. In this mode, the set-point outputs are defined by the values written to the bits b0, b1, b2, b3; and the analog output is defined by the value written to the AOR. Internal control of these outputs is then overridden.

In automatic mode, the set-point outputs can only be reset off. Writing to the set-point output bits of the CSR has the same effect as a Reset command (R). The contents of the CSR may be read to interrogate the state of the set-point outputs.

1. Set manual mode, turn all set-points off:

	7	6	5	4	3	2	1	0:bit location
VJ<30>* or VJ0*	0	0	1	1	0	0	0	0 or <30>

V is command write, J is CSR and * is terminator.

2. Turn SP1, SP3 outputs on and SP2, SP4 outputs off:

		7	6	5	4	3	2	1	0:bit location
VJ<35>* or VJ5*	ASCII 0 =	0	0	1	1	0	1	0	1 or <35>

3. Select Automatic mode:

		7	6	5	4	3	2	1	0:bit location
VJ<40>* or VJ@*	ASCII 0 =	0	1	0	0	0	0	0	0 or <40>

Note: Avoid writing values <0A> (LF), <0D> (CR), <24> (\$) and <2E> (*) to the CSR. These values are interpreted by the meter as end of command control codes and will prematurely end the write operation.

11.7.10. (AOR) Analog Output Register

The Analog Output Register controls the analog output of the meter. The manual mode must first be engaged by setting bit 4 of the Control Status Register. The range of values of this register is 0 to 4095, which corresponds to 0 mA, 0 V and 20 mA, 10 V; respectively. The table lists correspondence of the output signal with the register value.

REGISTER VALUE	OUTPUT SIGNAL*	
	I (mA)	V (V)
0	0.000	0.000
1	0.005	0.0025
2047	10.000	5.000
4094	19.995	9.9975
4095	20.000	10.000

**Due to the absolute accuracy rating and resolution of the output card, the actual output signal may differ 0.15% FS from the table values. The output signal corresponds to the range selected (20 mA or 10 V)*

Writing to this register, while the meter is in the manual mode, causes the output signal to update immediately. While in the automatic mode, this register may be written to, but the output will not update until the meter is placed in manual mode.

11.7.10.1. Examples:


1. Set output to full scale:

VI4095*

2. Set output to zero scale:

V10*

11.7.11. Command response time

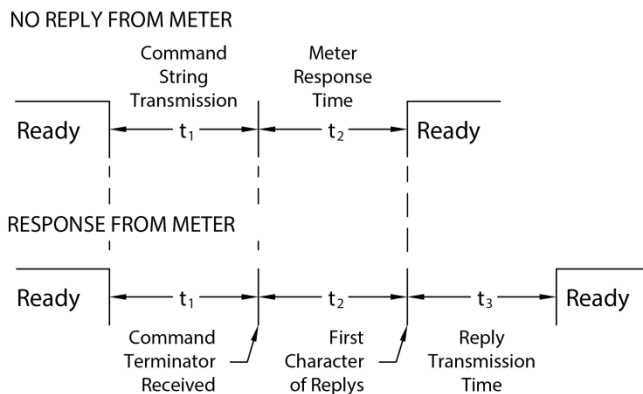

Timing Diagram Figure

The meter can only receive data or transmit data at any one time (half-duplex operation). The meter ignores commands while transmitting data, but instead uses RXD as a busy signal. When sending commands and data to the meter, a delay must be imposed before sending another command. This allows enough time for the meter to process the command and prepare for the next command.

At the start of the time interval t_1 , the computer program prints or writes the string to the com port, thus initiating a transmission. During t_1 , the command characters are under transmission and at

the end of this period, the command terminating character (*) is received by the meter. The time duration of t_1 is dependent on the number of characters and baud rate of the channel: $t_1 = \frac{(10 * \# \text{ of characters})}{\text{baud rate}}$

At the start of time interval t_2 , the meter starts the interpretation of the command and when complete, performs the command function. This time interval t_2 varies from 2 msec to 50 msec. If no response from the meter is expected, the meter is ready to accept another command.

If the meter is to reply with data, the time interval t_2 is controlled by the use of the command terminating character. The standard command line terminating character is '*'. This terminating character results in a response time window of 50 msec minimum and 100 msec maximum. This allows sufficient time for the release of the sending driver on the RS-485 bus. Terminating the command line with '\$' results in a response time window (t_2) of 2 msec minimum and 50 msec maximum. The faster response time of this terminating character requires that sending drivers release within 2 msec after the terminating character is received.

At the beginning of time interval t_3 , the meter responds with the first character of the reply. As with t_1 , the time duration of t_3 is dependent on the number of characters and baud rate of the channel: $t_3 = \frac{(10 * \# \text{ of characters})}{\text{baud rate}}$. At the end of t_3 , the meter is ready to receive the next command.

The maximum serial throughput of the meter is limited to the sum of the times t_1 , t_2 and t_3 .

11.7.12. Communication format

Data is transferred from the meter through a serial communication channel. In serial communications, the voltage is switched between a high and low level at a predetermined rate (baud rate) using ASCII encoding. The receiving device reads the voltage levels at the same intervals and then translates the switched levels back to a character.

The voltage level conventions depend on the interface standard. The table lists the voltage levels for each standard.


LOGIC	INTERFACE STATE	RS-232*	RS-485*
1	mark (idle)	TXD, RXD; -3 to -15 V	a-b < -200 mV
0	space (active)	TXD, RXD; +3 to +15 V	a-b > +200 mV

*Voltage levels at the receiver

Data is transmitted one byte at a time with a variable idle period between characters (0 to ∞). Each ASCII character is "framed" with a beginning start bit, an optional error detection parity bit and one or more ending stop bits. The data format and baud rate must match that of other equipment in order for communication to take place. The figures list the data formats employed by the meter.

11.7.12.1. Start bit and Data bits

Data transmission always begins with the start bit. The start bit signals the receiving device to prepare for reception of data. One bit period later, the least significant bit of the ASCII encoded character is transmitted, followed by the remaining data bits. The receiving device then reads each bit position as they are transmitted. Since the sending and receiving devices operate at the same transmission speed (baud rate), the data is read without timing errors.

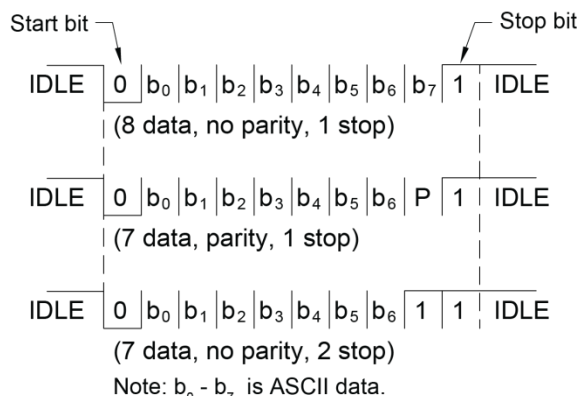

Character Frame Figure


11.7.12.2. Parity bit

After the data bits, the parity bit is sent. The transmitter sets the parity bit to a zero or a one, so that the total number of ones contained in the transmission (including the parity bit) is either even or odd. This bit is used by the receiver to detect errors that may occur to an odd number of bits in the transmission. However, a single parity bit cannot detect errors that may occur to an even number of bits. Given this limitation, the parity bit is often ignored by the receiving device. The meter ignores the parity bit of incoming data and sets the parity bit to odd, even or none (mark parity) for outgoing data.

11.7.12.3. Stop bit

The last character transmitted is the stop bit. The stop bit provides a single bit period pause to allow the receiver to prepare to re-synchronize to the start of a new transmission (start bit of next byte). The receiver then continuously looks for the occurrence of the start bit.

11.8. Module 8 - Analog Output Parameters (8-Out)

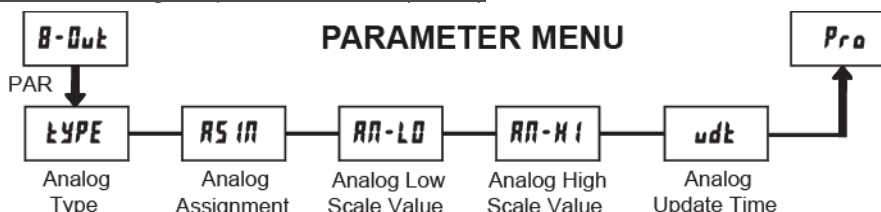

An analog output card must be installed in order to access this module.

11.8.1. Analog type




Selection
0-20
4-20
0-10

Range
0 to 20 mA
4 to 20 mA
0 to 10 V


Enter the analog output type. For 0-20 mA or 4-20 mA, use terminals 18 and 19. For 0-10 V, use terminals 16 and 17. Only one range can be used at a time.

11.8.2. Analog assignment

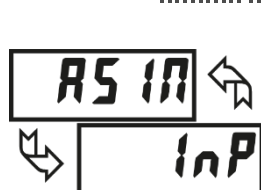

Enter the source for the analog output to retransmit:
INP = Display Input Value
HI = Maximum Display Input Value
LO = Minimum Display Input Value
Tot = Totalize Display Value


11.8.3. Analog low scale value

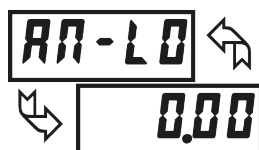

- 19999 to 99999

Enter the Display Value that corresponds to 0 mA (0-20 mA), 4 mA (4-20 mA) or 0 VDC (0-10 VDC).

11.8.4. Analog high scale value

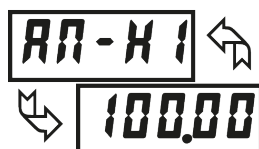

- 19999 to 99999

Enter the Display Value that corresponds to 20mA (0-20 mA), 20 mA (4-20 mA) or 10 VDC (0-10 VDC).

11.8.5. Analog update time




0.0 to 10.0


Enter the analog output update rate in seconds. A value of 0.0 allows the meter to update the analog output at a rate of 20/sec.

11.9. Module 9 – Factory service operations (9-FCS)

PARAMETER MENU

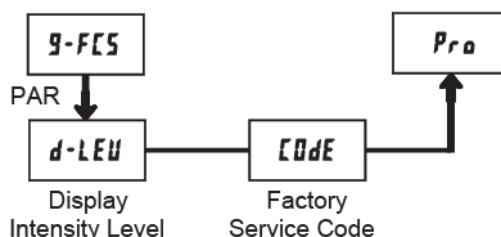


11.9.1. Display intensity level

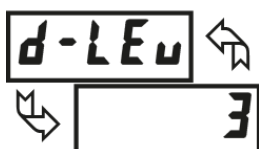


Enter the desired Display Intensity Level (0-15) by using the arrow keys. The display will actively dim or brighten as the levels are changed. This parameter also appears in Quick Programming Mode when enabled.

11.9.2. Restore factory defaults

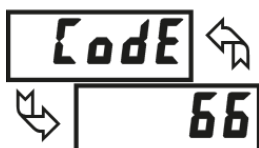

Use the arrow keys to display **CODE 66** and press **PAR**. The meter will display **RESET** and then return to **CODE 50**. Press **DSP** key to return to Display Mode. This will overwrite all user settings with the factory settings.

11.9.3. Calibration

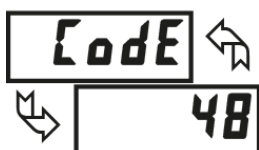

The meter has been fully calibrated at the factory. Scaling to convert the input signal to a desired display value is performed in Module 1. If the meter appears to be indicating incorrectly or inaccurately, refer to Troubleshooting before attempting to calibrate the meter.

When recalibration is required (generally every 2 years), it should only be performed by qualified technicians using appropriate equipment. Calibration does not change any user programmed parameters. However, it may affect the accuracy of the input signal values previously stored using the Apply (**APPLY**) Scaling Style.

Calibration may be aborted by disconnecting power to the meter before exiting Module 9. In this case, the existing calibration settings remain in effect.

Input Calibration



WARNING: Calibration of this meter requires a signal source with an accuracy of 0.01% or better and an external meter with an accuracy of 0.005% or better.

Before starting, connect -SIG (terminal 4) to COMM (terminal 5). This allows a single ended signal to be used for calibration. Connect the calibration signal to +SIG (terminal 3) and -SIG (terminal 4). Verify the Input Range jumper is in the desired position. Allow a 30 minute warm-up period before calibrating the meter. **RD** and **PAR** can be chosen to exit the calibration mode without any changes taking place. Perform the following procedure:

1. Press the arrow keys to display **CODE 48** and press **PAR**.
2. Choose the range to be calibrated by using the arrow keys and press **PAR**.
3. When the zero range limit appears on the display, apply 0 mV between +SIG and -SIG.
4. Press **PAR** and **----** will appear, wait for next prompt.
5. When the top range limit appears on the display, apply the corresponding +SIG and -SIG voltage (20 mV or 200 mV).
6. Press **PAR** and **----** will appear, on the display for about 10 seconds.
7. When **RD** appears, press **PAR** twice to exit programming.
8. Repeat the above procedure for each range to be calibrated or to recalibrate the same range. It is only necessary to calibrate the input ranges being used.
9. When all desired calibrations are completed, remove -SIG to COMM connection and external signal source.
10. Restore original configuration and jumper settings.

Analog output card calibration

Before starting, verify that the precision voltmeter (voltage output) or current meter (current output) is connected and ready. Perform the following procedure:

1. Use the arrow keys to display **CODE 48** and press **PAR**.
2. Use the arrow keys to choose **OUT** and press **PAR**.
3. Using the chart below, step through the five selections to be calibrated. At each prompt, use the PAX arrow keys to adjust the external meter display to match the selection being calibrated. When the external reading matches, or if this range is not being calibrated, press **PAR**.


<u>SELECTION</u>	<u>EXTERNAL METER</u>	<u>ACTION</u>
00.A	0.00	Adjust if necessary, press PAR
40.A	4.00	Adjust if necessary, press PAR
200.A	20.00	Adjust if necessary, press PAR
00.u	0.00	Adjust if necessary, press PAR
100.u	10.00	Adjust if necessary, press PAR

4. When **RD** appears remove the external meters and press **PAR** twice.

12. TROUBLESHOOTING


PROBLEMS	REMEDIES
NO DISPLAY	CHECK: Power level, power connections
PROGRAM LOCKED-OUT	CHECK: Active (lock-out) user input ENTER: Security access code requested
MAX, MIN, TOT LOCKED-OUT	CHECK: Module 3 programming
INCORRECT INPUT DISPLAY VALUE	CHECK: Module 1 programming, position of the jumper for the input scale, input connections, input signal level, Module 4 Display Offset is zero, DSP is on Input Display PERFORM: Calibration (If the above does not correct the problem.)
"OLOL" in DISPLAY (SIGNAL LOW)	CHECK: Module 1 programming, input connections, position of the jumper for the input scale, input signal level
"ULUL" in DISPLAY (SIGNAL HIGH)	CHECK: Module 1 programming, input connections, position of the jumper for the input scale, input signal level
JITTERY DISPLAY	INCREASE: Module 1 filtering, rounding, input scale CHECK: Wiring is per EMC installation guidelines
MODULES or PARAMETERS NOT ACCESSIBLE	CHECK: Corresponding plug-in card installation
DISPLAY ZERO'S AT LEVELS BELOW 1% OF RANGE	PROGRAM: Module 4 as Hi-t: 0.0 LO-t: 3271.1 (to disable zero chop feature)
ERROR CODE (Err -n) Err -1	PRESS: RST Internal hardware fault: A fault of the microprocessor and/or the input circuit has been detected. Return the DISP-PAXD for repair.
Err-2	Parameter list memory fault: One or more of set-up parameters has changed value due to possible electrical glitch or loss of power during parameter save operation. (during "End" display) Verify all set-up parameters, exit parameter set-up mode and cycle power the meter to clear error. If the error remains, return meter for repair.
Err-3	Calibration memory fault: Verify calibration accuracy of meter. If out of tolerance, re-calibrate the meter. Otherwise, to clear error, enter and exit parameter set-up mode and cycle power to meter. If the error remains, return meter for repair.
Err-4	Analogue output calibration memory fault: Verify calibration accuracy of analogue output. To clear error, enter and exit parameter set-up mode and cycle power to meter. If the error remains, replace output card.
Err-5	Defective keypad: The meter has detected one of the keypad switches is defective. Inspect keypad for signs of damage or sticking. Cycle power to meter to clear error. If the error remains, return meter for repair.

13. INDI-PAXS PROGRAMMING QUICK OVERVIEW

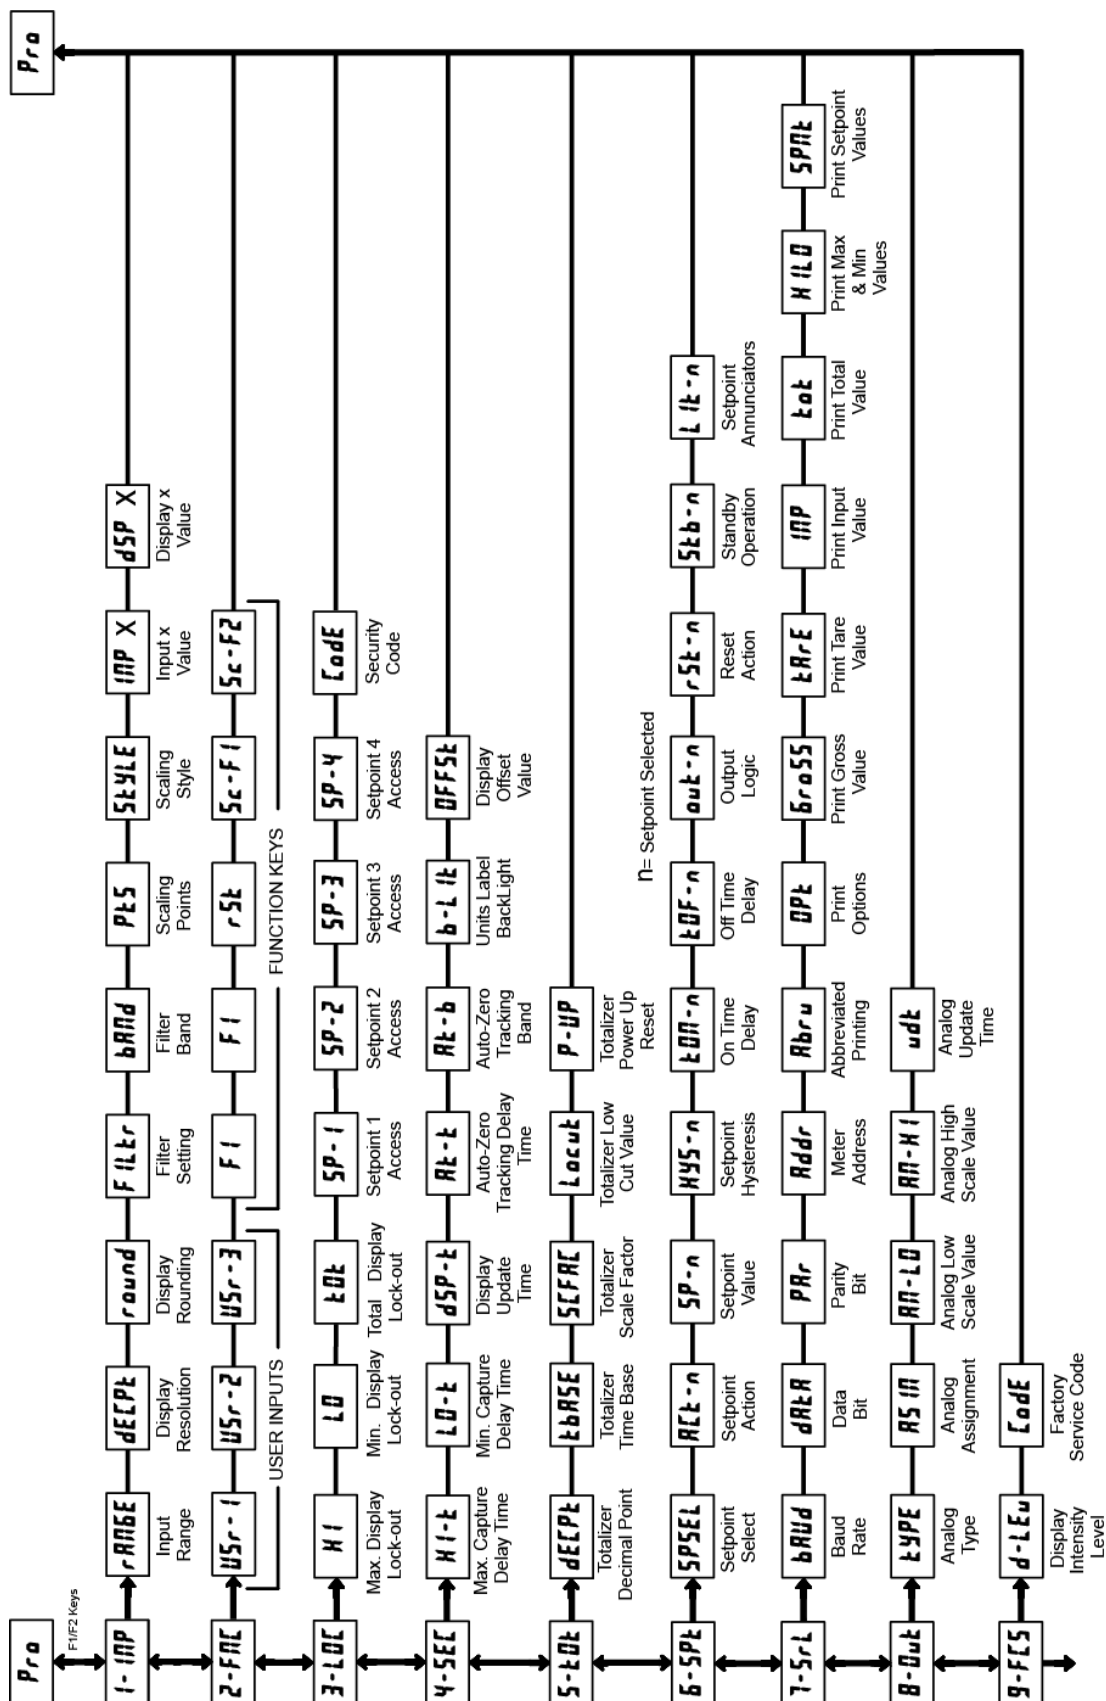

TECHNICAL DRAWINGS: ANALOGUE INPUT PANEL METERS

INDI-PAXS DISP-PAX > STANDARD DIMENSIONS

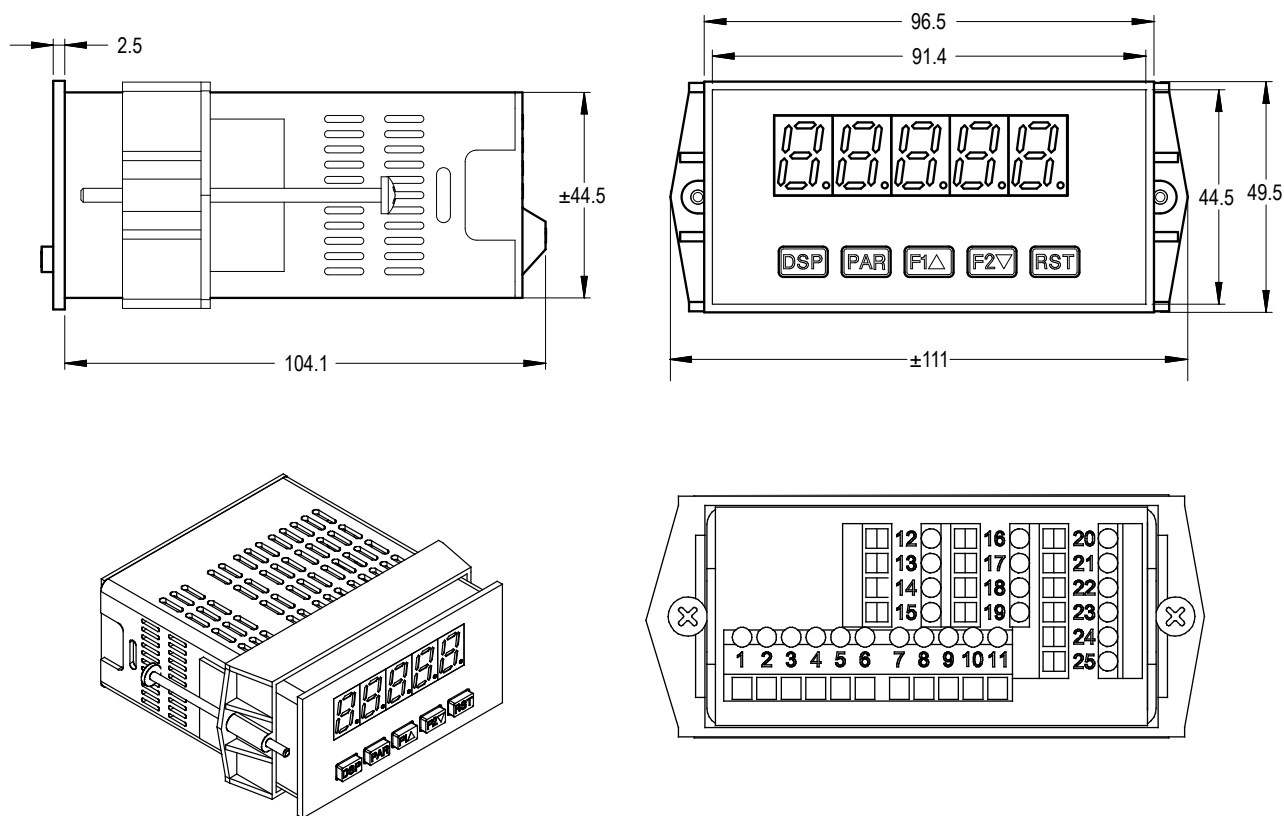


Note: recommended min. clearance (behind the panel) for mounting is 140 mm deep and 53.4 mm high. Panel cut-out 92 mm (-0+0.8) 45 mm (-0+0.5)


Dimensions in mm

Terminals


INDI-PAXS

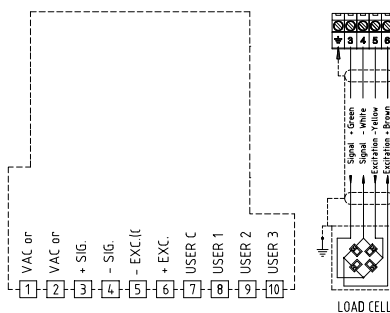

DISP-PAX

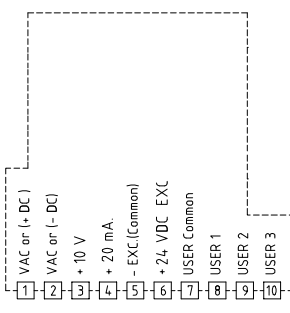

DISP-PAXD

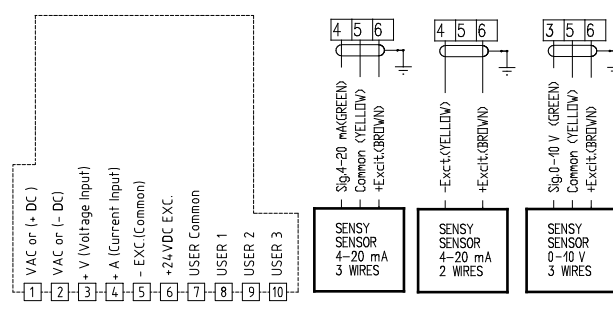

OPTION CARDS

Communication cards (max. 1 choice)

CARD-CDC10




CARD-CDC1C




- RS-485 field bus communication interface
Available with crew terminals or DB9 connector

CARD-CDC10

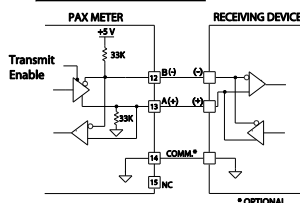

CARD-CDC1C

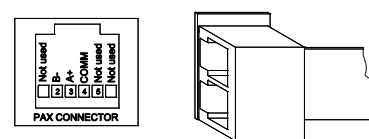

CARD-CDC20




CARD-CDC2C




- RS-232 half-duplex communication interface
Available with crew terminals or DB9 connector

CARD-CDC20

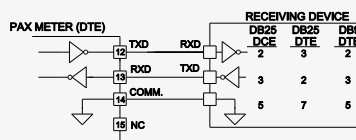

CARD-CDC2C

 

FEMALE

PIN 2 TXD
PIN 3 RXD
PIN 5 COMMON

CARD-CDC30



CARD-CDC40



- DeviceNet communication interface
- Modbus communication interface

CARD-CDC50 / CARD-CDC50-CRANE*



- Profibus-DP (EN 50170) communication interface

* As the CARD-CDC50 is too long for the housing of the CRANE-BOY, the CARD-CDC50-CRANE is supplied with a spacer to be inserted between the front of the electronics and the housing.


Analogue output card

CARD-CDL10



- Analogue output signal: 0-20 mA, 4-20 mA, 0-10 VDC

CARD-CDL10

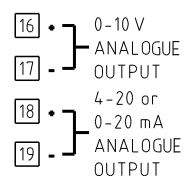


Relay cards (max. 1 choice)

CARD-CDS10 & CARD-CDS20




- 2 or 4 set-points activating each an independent relay

CARD-CDS10

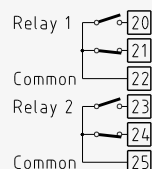

CARD-CDS20

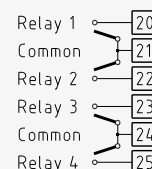

Cards already included

- Analogue output card:

CARD-CDL10

- Relay card:

CARD-CDS20 (4 set-points)

- Models:

CABIN-2xB1SUMD; CABIN-4xB1SUMD

- Models:

INDI-BOY DISP-BOYP; CRANE-BOY CRANE-BOYP; DISP-BOYDP
CRANE-BOYDP; CRANE-SUMD DISP-SUMD; CRANE-BOY-Exd;
CABIN-2xB1SUMD; CABIN-4xB1SUMD.